




**USER MANUAL – EN**

**IN 20073 Exercise bike inSPORTline Delavan UB**

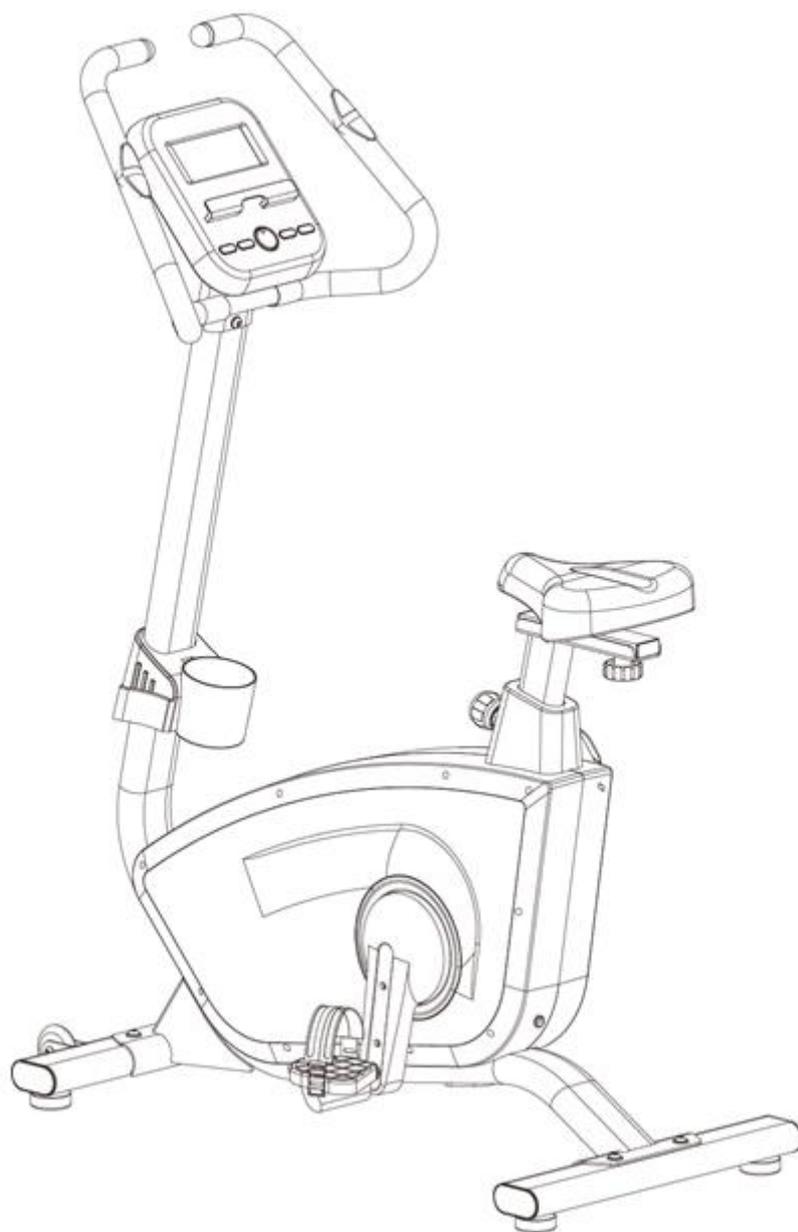

# CONTENTS

- SAFETY INSTRUCTIONS..... 3
- IMPORTANT NOTES ..... 3
- PARTS LIST ..... 4
- DIAGRAM ..... 6
- ASSEMBLY ..... 8
- CONSOLE ..... 12
- PROGRAMS..... 13
- TROUBLESHOOTING ..... 15
- USE ..... 15
- EXERCISING INSTRUCTIONS ..... 16
- CORRECT BODY POSTURE ..... 17
- MAINTENANCE ..... 17
- STORAGE ..... 17
- IMPORTANT NOTICE..... 17
- ENVIRONMENT PROTECTION ..... 17
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 18

## **SAFETY INSTRUCTIONS**

- To ensure the best safety of the exerciser, regularly check it on damages and worn parts.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure that that person is familiar with the content and instructions in these instructions.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your work-out, remove all sharp-edged objects around the exerciser.
- Only use the exercise for your work-out if it works flawlessly.
- Any broken, worn or defective part must immediately be replaced and/or the exerciser must no longer be used until it has been properly maintained and repaired.
- Parents and other supervisory persons should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to children's natural play instinct and interest in experimenting.
- If you do allow children to use this exerciser, be sure to take into consideration and assess their mental and physical condition and development, and above all their temperament. Children should use the exerciser only under adult supervision and be instructed on the correct and proper use of the exerciser. The exerciser is not a toy.
- Make sure there is sufficient free space around the exerciser when you set it up min 0.6 m.
- To avoid possible accidents, do not allow children to approach the exerciser without supervision, since they may use it in a way for which it is not intended due to their natural play instinct and interest in experimenting.
- Please note that an improper and excessive work-out may be harmful to your health.
- Please note that levers and other adjustment mechanisms are not projecting into the area of movement during the work-out.
- When setting up the exerciser, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Adjustable parts can not prohibit the movement of the user.
- Always wear appropriate clothing and shoes which are suitable for your work-out on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the work-out due to their form (for example, length). Be sure to wear appropriate shoes which are suitable for the work-out, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your work-out and sensible eating habits.
- Maximal weight: 110 kg
- Category: HC for home use

## **IMPORTANT NOTES**

- Assemble the exerciser as per assembly instructions and be sure to only use the structural parts provided with the exerciser and designed for it. Prior to the assembly, make sure the contents of the delivery is complete by referring to the parts list of the assembly and operating instructions.

- Be sure to set up the exerciser in a dry and even place and always protect it from humidity. If you wish to protect the place particularly against pressure points, contamination, etc., it is recommended to put a suitable, non-slip mat under the exerciser.
- The general rule is that exercisers and training devices are no toys. Therefore, they must only be used by properly informed or instructed persons.
- Stop your work-out immediately in case of dizziness, nausea, chest pain or any other physical symptoms. In case of doubt, consult your physician immediately.
- Children, disabled and handicapped persons should use the exercise only under supervision and in presence of another person who may give support and useful instructions.
- Be sure that your body parts and those of other persons are never close to any moving parts of the exerciser during its use.
- When adjusting the adjustable parts, make sure they are adjusted properly and note the marked, maximum adjusting position, for example of the saddle support, respectively.
- Do not work out immediately after meals!


**WARNING! A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!**

## PARTS LIST


NO.	Description	Qty	NO.	Description	Qty
1	Main frame	1	30	Transport wheels	2
2	Front stabilizer	1	31	Screw ST4.2*20	12
3	Seat	1	32	End cap 38*38*1.5	2
4	Seat slider	1	33	Arc washer Ø8*Ø16*1.5	2
5	Handlebar post	1	34	Washer Ø8	5
6	Handlebars	1	35	Nut M8	6
7	Rear stabilizer	1	36	Seat	1
8	Console	1	37	Nut M8	2
9	Screw M5*10	4	38	Power supply cable 200 mm	1
10	Sensor cable 800 mm	1	39	AC adapter	1
11	Handlebar end cap Ø25*1.5	2	40	Bottle holder - A	1
12	Foam grip Ø30xØ24x630	2	41	Screw ST4.2*25	7
13	Pulse sensor cable 750 mm	2	42	Screw M8*20	1
14	Screw ST4.2*20	2	43	Idle wheel bracket	1
15	Screw M8*15	10	44	Idle wheel	1
16	Big washer Ø8*Ø16*2.0	8	45	Bearings 6003-ZZ	2
17	Stabilizer end cap	4	46	Wave washer	1
18	Tension cable	1	47	Shaft ring	2
19	Leveling feet	4	48	Belt	1
20	Nut	4	49	Pulley belt with crank	1
21	Bushing	1	50	Straight spindle	1
22	Sensor cable 1000 mm	1	51	Screw M6*15	4


23	Left pedal	1	52	Spring washer Ø6	4
24	Right pedal	1	53	Nut M6	4
25	Seat post cover	1	54	Screw ST2.9*12	2
26	Knob M16x1.5	1	55	Flywheel	1
27	Knob M10	1	56	Screw with eyelet M6*36	2
28	Big washer Ø8* Ø20*2.0	1	57	U shaped bracket	2
29	Screw M8*35		58	Spring washer	2
59	Nut M6	2	67	Nut M10*1.25	2
60	Nut M10*1.0*6	2	68	Cover	2
61	Screw with eyelet M8*110	1	69	Sensor cable 300 mm	1
62	Left chain cover	1	70	Motor	1
63	Right chain cover	1	71	Bottle holder - B	1
64	Plastic screw Ø8*32	2	72	Washer $\phi$ 12* $\phi$ 6*1.0	1
65	Left crank	1	73	Screw M6*10	1
66	Right crank	1			

## TOOLS

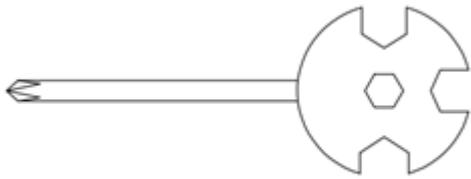	
Allen key S6 – 1 pcs	Multifunction screw – 1 pcs

# DIAGRAM

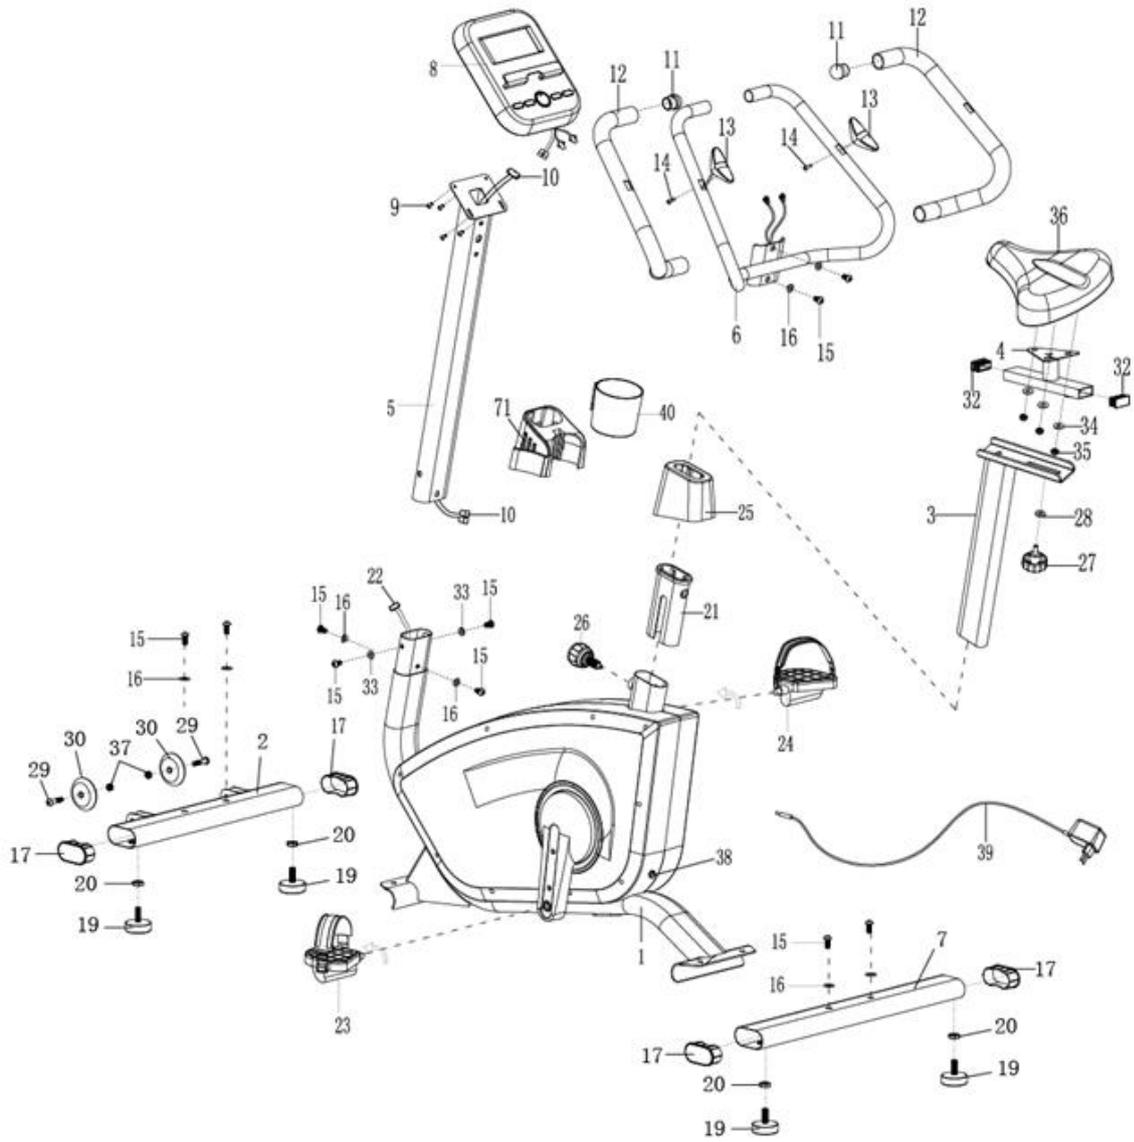

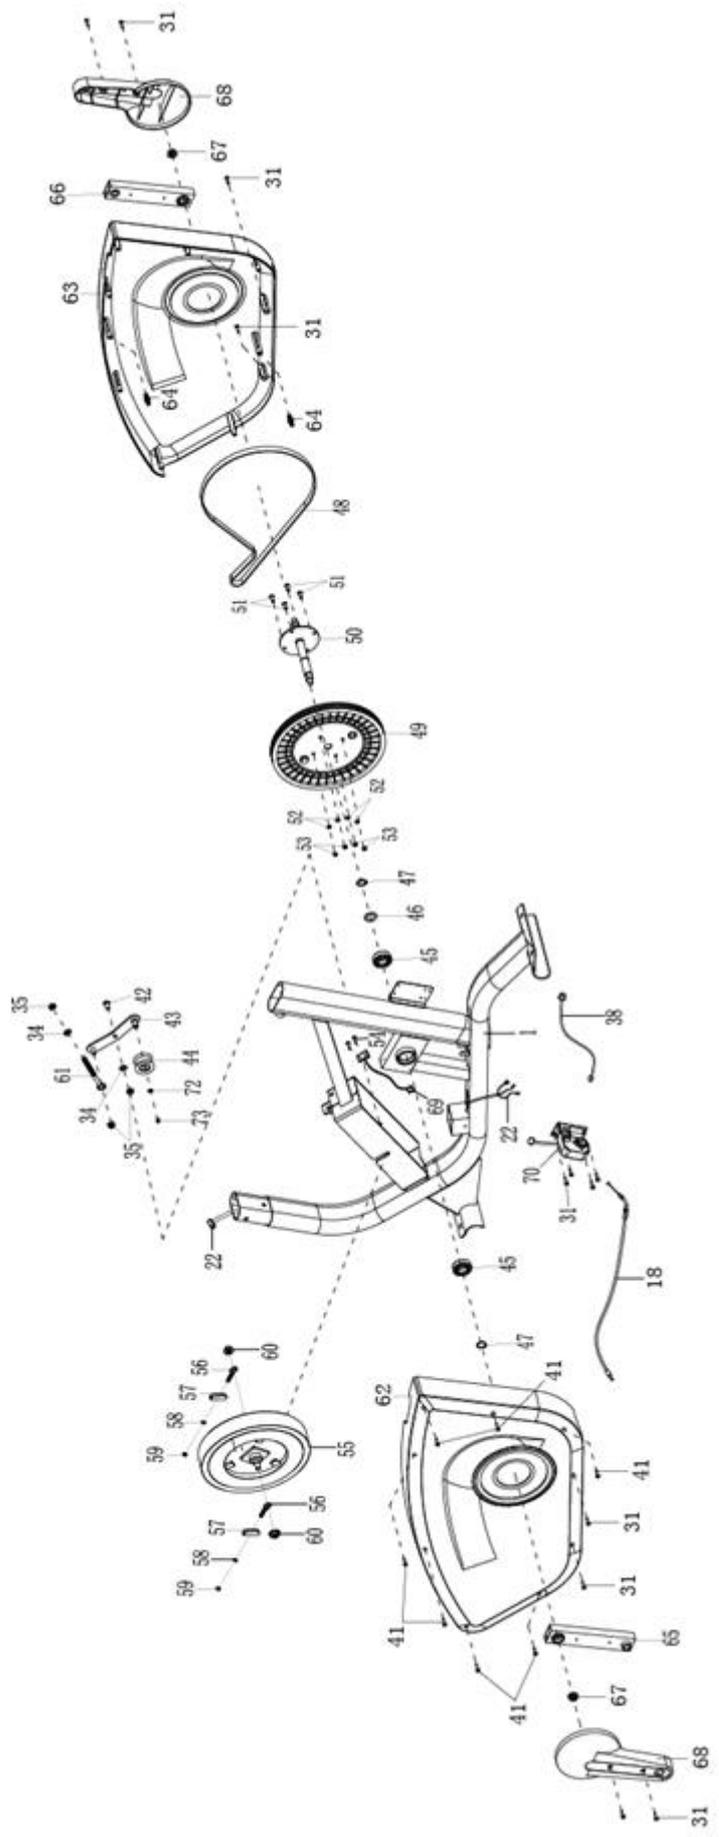


## ASSEMBLY

### STEP 1

Attach the leveling feet (19) to the front and rear stabilizer (2 and 7).

Remove the 2 screws (15), 2 washers (16) from the front stabilizer. Attach the front stabilizer (2) to the front of the main frame (1) with 2 screws (15) and 2 washers (16)

Remove the 2 screws (15), 2 washers (16) from the rear stabilizer. Attach the rear stabilizer (7) to the rear of the main frame (1) with 2 screws (15) and 2 washers (16).

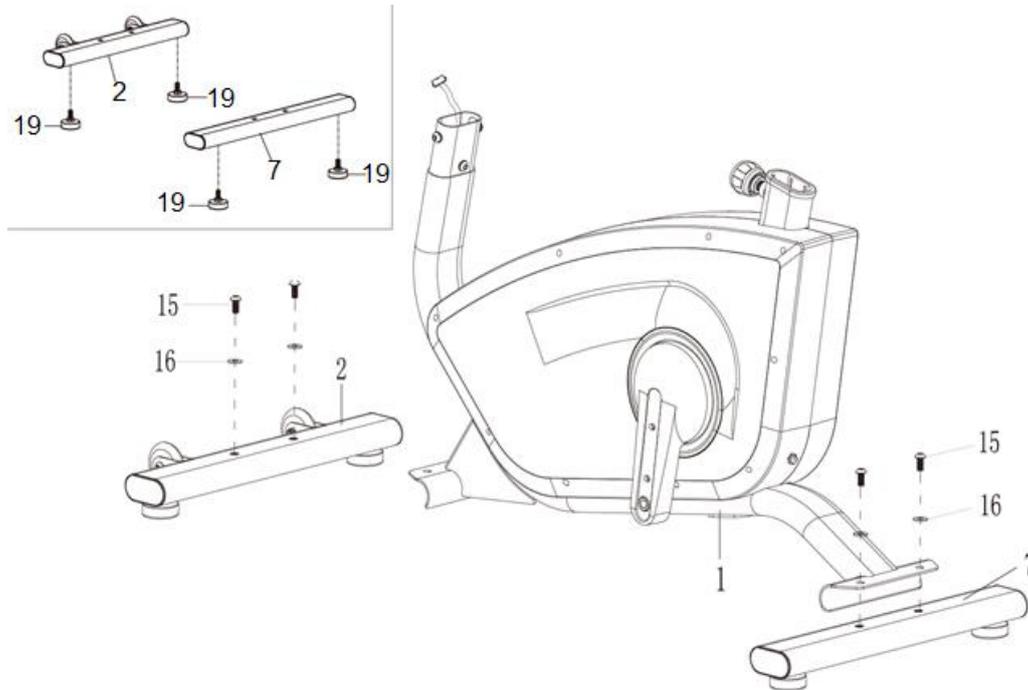


### STEP 2

The cranks, pedals and strap are marked L - Left, R - Right.

Attach the left pedal (23) to the left crank (65). Screw the pedal counterclockwise.

Attach the right pedal (24) to the right crank (66). Screw the pedal clockwise.

**WARNING:** Screwing on the opposite side can damage the thread!

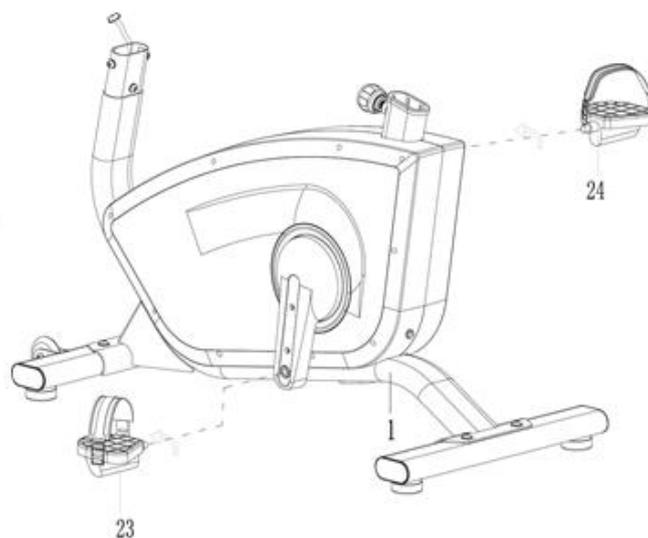

### STEP 3

Remove the 3 nuts (35), 3 washers (34) from the seat (36).


Attach the seat (36) to the seat slider (4) with 3 nuts (35) and 3 washers (34).

Remove the knob (27) and washer (28) from the seat slider (4). Attach the seat slider (4) to the seat post (3) using the knob (27) and washer (28).

Remove the knob (26) from the main frame (1). Slide the seat post cover (25) into the seat post (3). Insert the seat post (3) into the main frame (1) and fasten with the knob (26).

You can adjust the saddle up / down, forward / backward with the knobs (26 and 27).


**WARNING:** The maximum height of the seat post is indicated by a sign on the seat post.

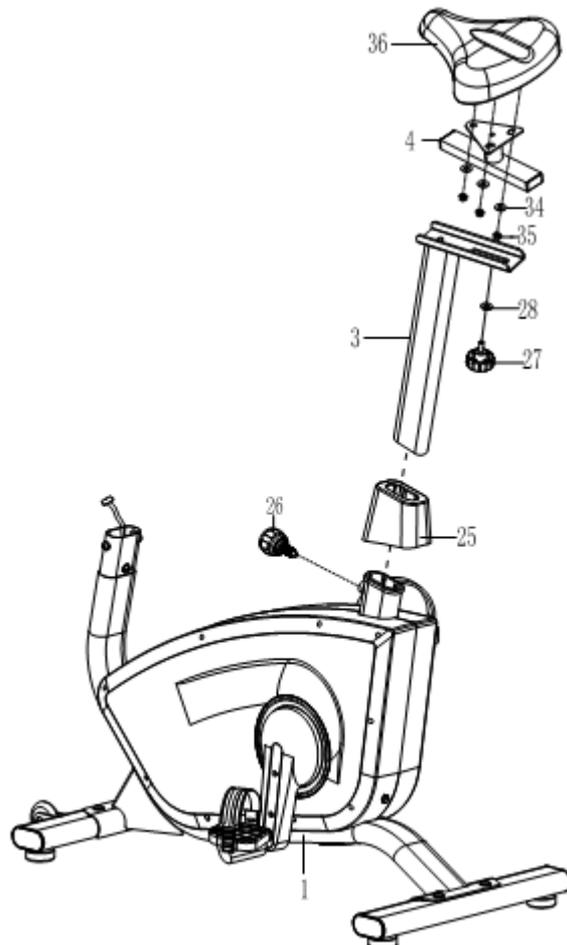

#### KROK 4


Remove the 4 screws (15), 2 washers (16), 2 washers (33) from the main frame (1).

Connect the sensor cable (17) from the main frame (1) to the cable (9) from the handlebar post (5). Attach the bottle holder - A (40) to the Bottle Holder - B (71). Slide the bottle holder A / B (71/40) onto the main frame (1). Insert the handlebar post (5) into the main frame (1) and fasten with 4 screws (15), 2 washers (16) and 2 washers (33).

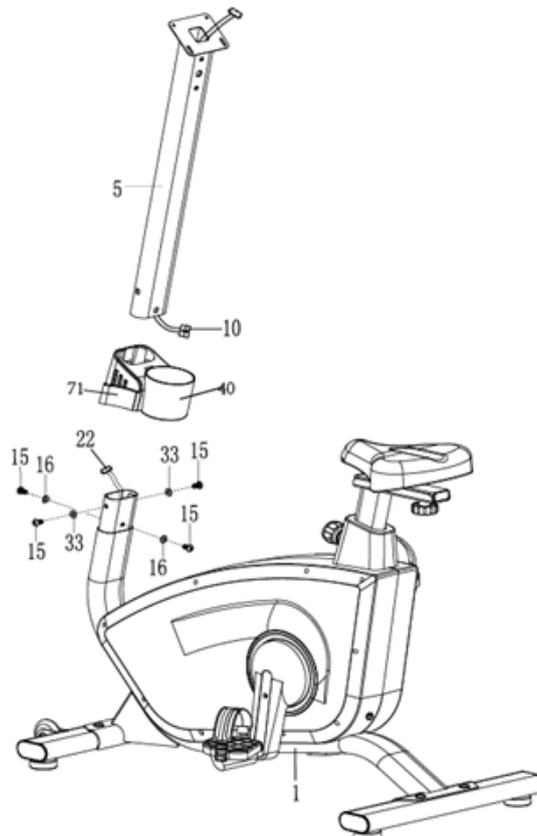

#### STEP 5

Remove the 2 screws (15), 2 washers (16) from the handlebars (6). Pass the cable (13) through the handlebar post (5) and pull it out with the top end. Attach the handlebars (6) to the handlebar post (5) using the 2 screws (15) and 2 washers (16).

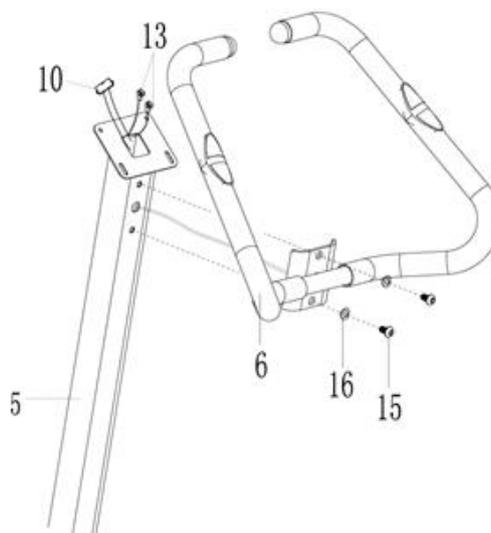


## STEP 6

Remove the screws (9) from the console (8).

Connect the cables (13) and (10) to the console (8). Insert excess cables into the handlebar post (5). Attach the console (8) to the handlebar post (5) with 4 screws (9).

Plug the AC adapter (39) into the power supply (38) on the left.

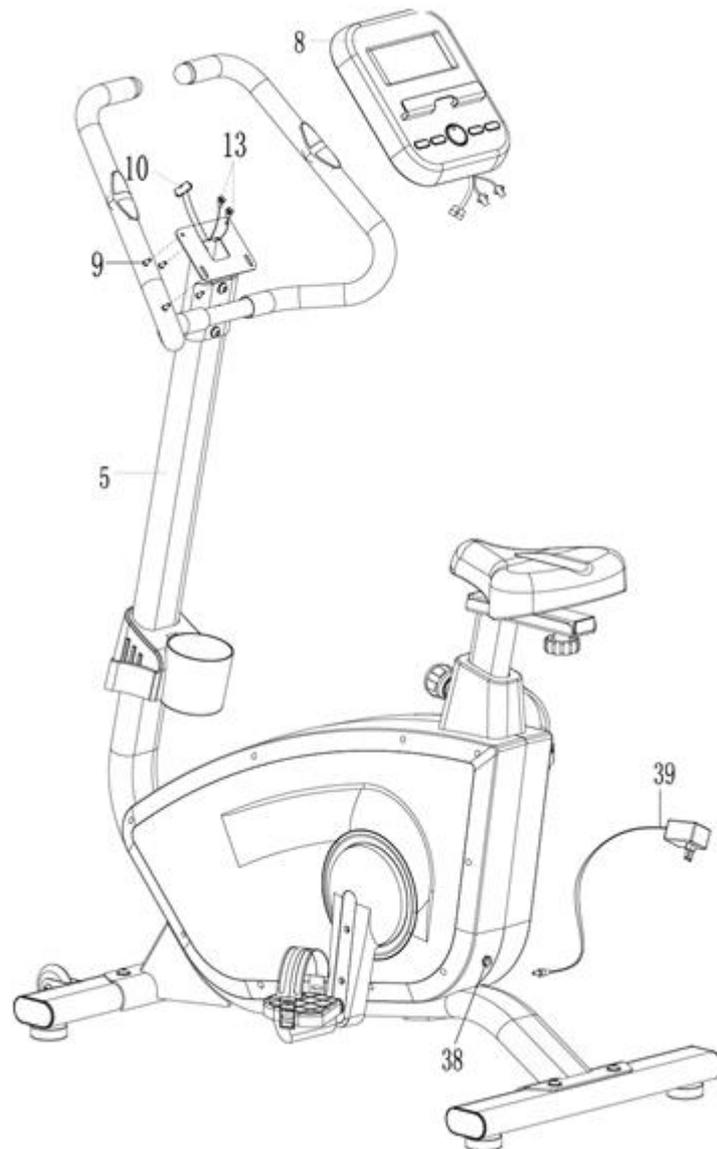

## CONSOLE



### BUTTONS

START/STOP (ST/SP)	Starts / stops the program Starts body fat test
DOWN	Reduces value or load
UP	Increases value or load
MODE (ENTER)	Confirm the value Change the displayed function
TEST (PULSE, RECOVERY)	Physical test
RESET *	Resets the setting, holding down the button for 3 seconds resets all values
BODY FAT *	Body fat program

\* Depends on version

### PROGRAM SELECTION

After turning on the device, you can use the UP and DOWN buttons to select a program. Confirm the selected program with MODE (ENTER).

After selecting a program, you can edit some parameters.

Parameters:

TIME, DISTANCE, CALORIES, AGE

Some parameters cannot be modified. It is depended on the program.


The selected parameter starts flashing. Adjust the value using the UP and DOWN buttons. Confirm with MODE (ENTER).

Press START / STOP to turn on the program.

# PROGRAMS


## MANUAL PROGRAM (P1)

Select Manual with the UP and DOWN buttons. Press MODE to confirm. The first parameter TIME starts flashing. Set the value using the UP and DOWN buttons. Confirm with MODE (ENTER). Save and set another value. After setting all values, press START / STOP to start the program. When any parameter set reaches 0, a beep sounds and the program stops. Press START to complete the program.

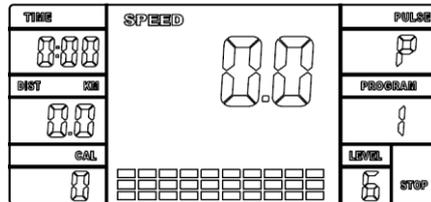

## PRE-SET PROGRAM (P2-P12)

The console contains 6 preset programs. Select one of the preset programs. The first parameter TIME starts flashing. Set the value using the UP and DOWN buttons. Confirm with MODE (ENTER). Save and set another value. After setting all values, press START / STOP to start the program. When any parameter set reaches 0, a beep sounds and the program stops. Press START to complete the program.

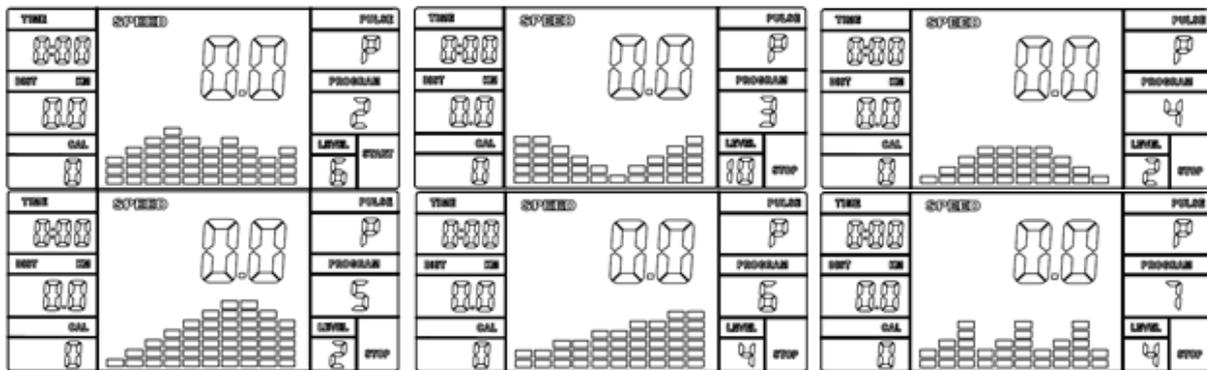

## HEART RATE CONTROL (P8 – P10)

User can select target HRC:


P8- 55% TARGET H.R= 55% of (220-AGE)

P9- 75% TARGET H.R= 75% of (220- AGE)

P10- 90% TARGET H.R=90% of (220- AGE)

Choose one of HEC programs. The first parameter TIME starts flashing. Set the value using the UP and DOWN buttons. Confirm with MODE (ENTER). Save and set another value. After setting all values, press START / STOP to start the program


If the pulse is  $\pm 5$  from the set value, the console will automatically adjust the resistance. The console monitors the pulse status every approx. 10 seconds. When any parameter set reaches 0, a beep sounds and the program stops. Press START to complete the program.

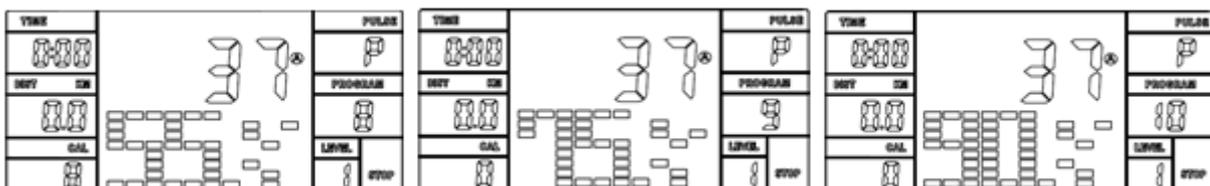

### TARGET HEART RATE PROGRAM (P11)

Choose TARGET H.R program. The first parameter TIME starts flashing. Set the value using the UP and DOWN buttons. Confirm with MODE (ENTER). Save and set another value. After setting all values, press START / STOP to start the program

If the pulse is  $\pm 5$  from the set value, the console will automatically adjust the resistance. The console monitors the pulse status every approx. 10 seconds. When any parameter set reaches 0, a beep sounds and the program stops. Press START to complete the program.

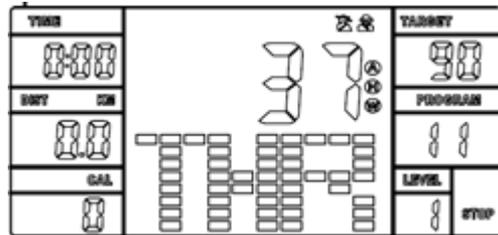


### BODY FAT PROGRAM (P12)

Choose BODY FAT program. The 1 parameter MALE starts flashing, set MALE or FEMALE using the UP and DOWN buttons. Confirm and save the setting with MODE and set HEIGHT. Adjust the value using the UP and DOWN buttons. Confirm and save the setting with MODE and set WEIGHT. Adjust the value using the UP and DOWN buttons. Confirm and save the setting with ENTER and set AGE. Adjust the value using the UP and DOWN buttons. Confirm and save with MODE.

After setting all values, press START / STOP to start the program. Hold the pulse detection sensors. After 15 seconds, Fat% (% fat), BMR (basal metabolism), BMI (Body Mass Index) and BODY TYPE are displayed.


The body type is divided into 9 categories based on body fat:

Type 1	5 % - 9 %
Type 2	10 % - 14 %
Type 3	15 % - 19 %
Type 4	20 % - 24 %
Type 5	25 % - 29 %
Type 6	30 % - 34 %
Type 7	35 % - 39 %
Type 8	40 % - 44 %
Type 9	45 % - 50 %

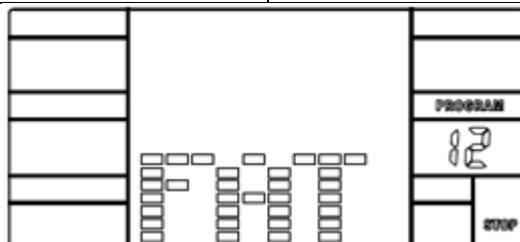

## POWER CONNECTION

Plug the adapter into the device and then into the wall outlet. The console displays all data and a beep sound.

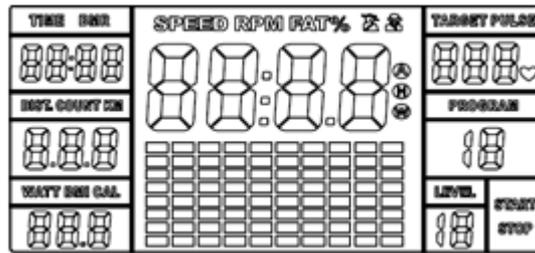

## CONSOLE ERRORS

ERROR 1 – poorly connected cables, poor contact or damaged motor

ERROR 2 – no pulse detected through pulse measurement plates during BODY FAT

## TROUBLESHOOTING

Error	Solution
Recumbent is not stable	Stabilize with stabilizing feet
The data is not displayed	1. Check the cable connection
	2. Check the battery status
	3. Replace the batteries
No pulse detected	1. Make sure the cables are properly connected
	2. Always hold the handles with both hands
	3. Press the plates too much
Recumbent creaks	Tighten the screws

## USE

Exercise on the exercise bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the exercise bike in can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an exercise bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the

number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the exercise bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the exercise bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the exercise bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

## EXERCISING INSTRUCTIONS

A successful workout begins with warm-up exercises and ends with cool-down (relaxing) exercises. The warm-up exercises should make your body ready for the main workout. The cool-down phase should protect your muscles from injuries and cramps. Do warm-up and cool-down exercises as shown in the chart below.



### Touching your toes

Slowly bend your back from hips. Keep your back and arms relaxed while stretching downwards to your toes. Do it as far as you are able and hold the position for 15 seconds. Bend your knees slightly.



### Upper thigh

Lean against a wall with one hand. Reach down and behind you. Lift up your right or left foot to your buttock as high as possible. Keep for 30 seconds and repeat twice for each leg.



### Hamstring stretched

Sit and outstretch your right leg. Rest the sole of your left foot against the inside of your right thigh. Stretch out your right arm along your right leg as far as you can. Hold for 15 seconds and relax. Repeat all with your left leg and left arm.



### Inside upper thigh

Sit on the floor and place your feet together. Knees are pointed outwards. Pull your feet as close as possible to your groin. Press your knees carefully downwards. Keep this position for 30-40 seconds if possible.



### Calves and Achilles tendon

Lean against a wall with your left leg in front of the right one and your arms forward. Stretch out your right leg and keep your left foot on the floor. Bend your left leg and lean forwards by moving your right hip in the direction of the wall. Hold for 30-40 seconds. Keep your leg stretched and repeat exercising with other leg.

## **CORRECT BODY POSTURE**

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

## **MAINTENANCE**

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.
- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.
- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

## **STORAGE**

Keep the exercise bike in a clean and dry environment. Make sure the power switch is turned off and the exercise bike is not plugged into the power socket.

## **IMPORTANT NOTICE**

- This exercise bike comes with standard safety regulations and is only suitable for home use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the exercise bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This exercise bike is not suitable as a professional or medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.

## **ENVIRONMENT PROTECTION**

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

# TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

## General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated hereunder determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

## Warranty Conditions

### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

## Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller

is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.



**SEVEN SPORT s.r.o.**

Registered Office:	Borivojova 35/878, 130 00 Praha 3, Czech Republic
Headquarters:	Delnicka 957, 749 01 Vitkov, Czech Republic
Warranty & Service Centre:	Cermenska 486, 749 01 Vitkov, Czech Republic
CRN:	26847264
VAT ID:	CZ26847264
Phone:	+420 556 300 970
E-mail:	eshop@insportline.cz reklamace@insportline.cz servis@insportline.cz
Web:	www.insportline.cz

---

**SK**

**INSPORTLINE s.r.o.**

Headquarters, Warranty & Service centre:	Elektricka 6471, 911 01 Trencin, Slovakia
CRN: 36311723	
VAT ID: SK2020177082	
Phone:	+421(0)326 526 701
E-mail:	objednavky@insportline.sk reklamacie@insportline.sk servis@insportline.sk
Web:	www.insportline.sk

Date of Sale:

Stamp and Signature of Seller: