




## **USER MANUAL – EN**

**TK-200, TK-201 Inflatable kayak Aquatone Blast 12'0" /  
13'6"**

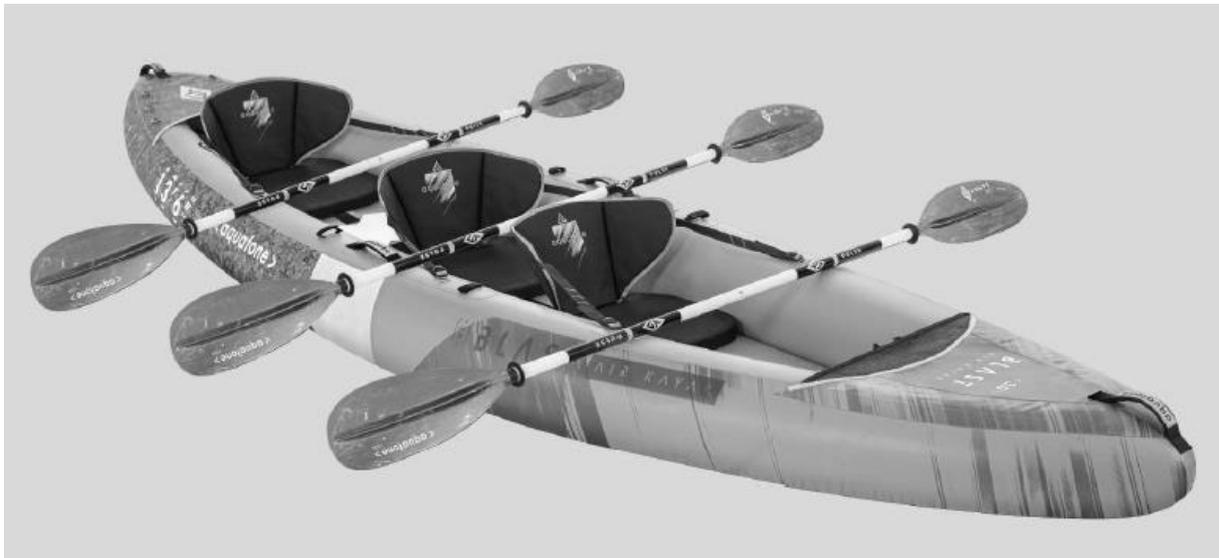

# CONTENTS


- IMPORTANT INFORMATION ..... 3
- IDENTIFIATION CARD ..... 3
- PARTS LIST ..... 4
- SAFETY INSTRUCTIONS..... 5
- BEFORE INFLATION ..... 5
- PUMP USE ..... 6
- DECK INFLATION ..... 6
- INFLATION OF THE SIDES ..... 7
  - SEAT ATTACHMENT ..... 7
- FINS ATTACHEMENT ..... 8
- PADDLE ASSEMBLY ..... 8
- KAYAK DEFLATION ..... 9
- FOLD AND PACK..... 9
- CARE, MAINTENANCE AND STORAGE ..... 10
- REPAIRS ..... 10
  - LEAK AROUND THE VALVE ..... 10
  - VALVE LEAK THROUGH THE MIDDLE PART ..... 11
- ENVIRONMENT PROTECTION ..... 11
- TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 12

Thank you for purchasing the product. Our kayaks are made to the highest safety requirements. We believe that you will be satisfied with the purchased product. Read the manual before use to use the product as efficiently as possible. We wish you many years of enjoyment and good experience with our kayaks.


## IMPORTANT INFORMATION

Model	
Date of Purchase:	
Dealer name:	
Province/State:	
Country:	
Item No:	
HIN no:	

## IDENTIFIATION CARD

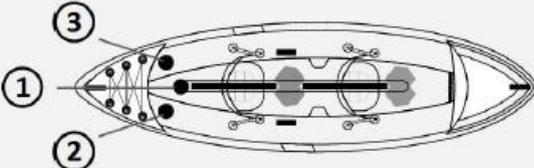 <b>aquatone</b>		<b>MODEL: TK-200 / TK-201</b>	
<div style="border: 1px dashed black; padding: 5px;">                 HIN <b>CN-AQT</b> </div>		EN ISO 6185-1 CAT III type 3B aquatone MADE IN CHINA	
 = 2 +  = 1  +  = 227KG / 500LBS; 250KG / 540LBS			
 2022 /			
 ● 			
① = 5PSI > 0.33BAR			
② + ③ = 3PSI > 0.2BAR			

## PARTS LIST

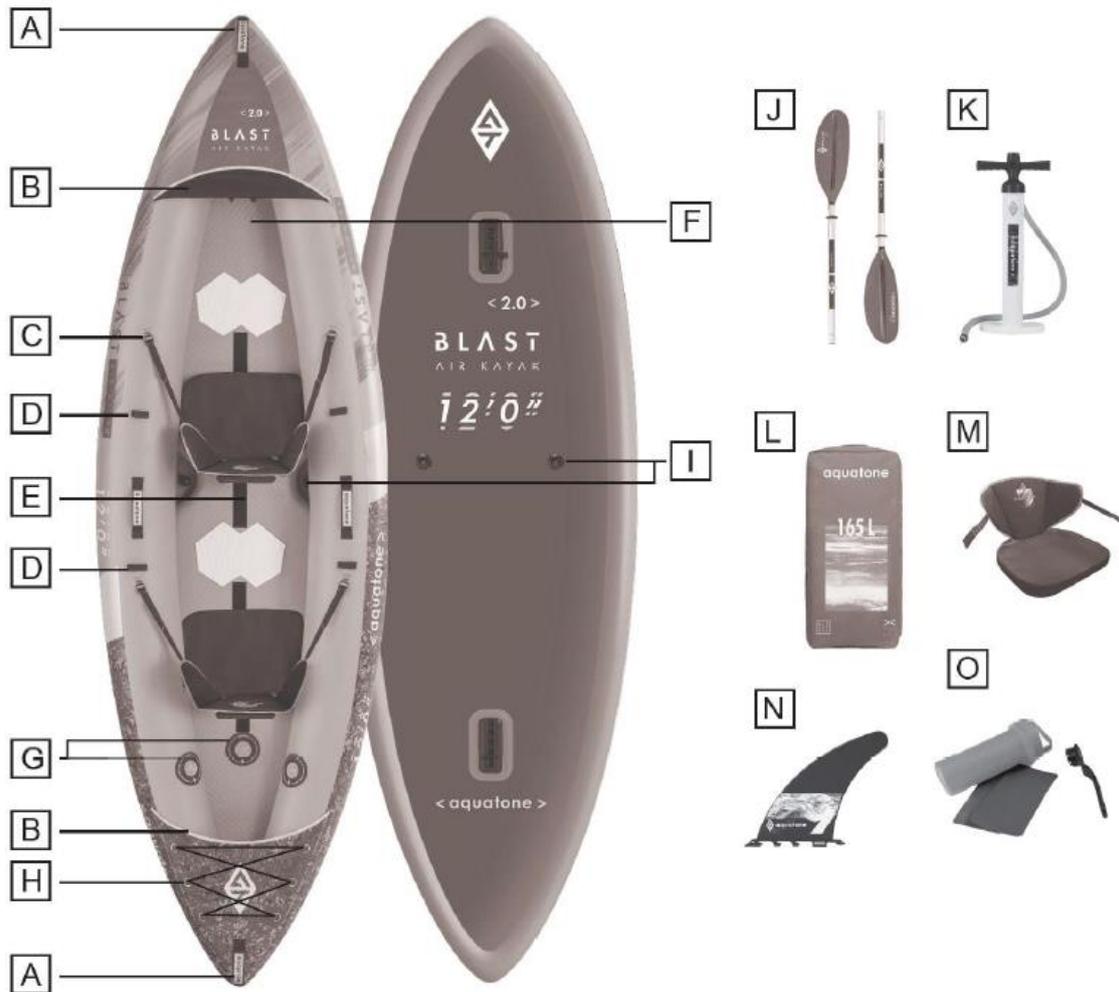

A	Handles
B	Water splash guard
C	Saddle attachment
D	Velcro paddle holders
E	Velcro deck saddle holder
F	High pressure deck surface
G	High pressure valves, max. Side pressure 3 Psi / 0.2 Bar, max. Deck pressure 5 Psi / 0.33 Bar
H	6-point cargo bungee cord system
I	Bailing valves
J	4-piece aluminum paddle PULSE
K	Double-acting hand pump
L	165L backpack
M	Saddle with backrest (TC-KS300 x 2, TC-KS300 x 3)
N	Fins 2x
O	Repair set

## **SAFETY INSTRUCTIONS**

Sports can be dangerous and physically demanding. There is a risk of serious injury or death from drowning. The user of this product acknowledges, understands, and takes responsibility of the risk involved in sports. Observe the following safety standards and safe operating practices whenever using this product.

When using an Aquatone board, you are personally responsible to determine if you have the required skill level to handle the different water and wind conditions. You should use your best judgement as to when and where to use your board. All users of an Aquatone board agree to assume all responsibilities for any damage or injury, including death, which may result from using or handling a SUP.

- Check weather conditions and water levels before heading out.
- Always wear an approved personal floatation device (PFD) before you start paddling, read the manufacturer's documentation about your PFD and familiarize yourself with how to properly wear it. (Always wear safety leash).
- Do not go into water if you are under the influence of alcohol, drugs, or medication as it may affect your condition, judgement, or ability to safely and securely operate your SUP.
- Be aware of your limitation and do not exceed your paddling ability.
- Dress accordingly for weather conditions and if necessary, wear a wetsuit.
- Always familiarize yourself with local waters and hazard environments before use.
- Never let kids or teenagers use the kayak without adult supervision.
- Never tow the SUP.
- Never use SUP as personal transport floatation device.
- Never exceed SUP's maximum weight limit.
- Always check all equipment for signs of wear or damage before use.
- Always carry identification card.
- It is recommended to be accompanied with multiple persons in case of an emergency or accident.
- Always inform others about using the kayak, location, destination, and number of people. Always inform yourself and other about medical conditions.
- Always follow coast guard regulations, local laws and regulations.

## **BEFORE INFLATION**

Thanks to the design of the kayak, the high-pressure valve can be released during transport. Therefore, it is important to check that the valve is fully tightened before use. The valve should be inspected regularly to ensure that it remains tight. This will prevent small pressure losses and ensure optimal performance of your kayak .

If pressure escapes from the inflated kayak around the valve, it is likely that the valve is not tightened properly. The valve must be tightened correctly to stop the pressure leak.

Note: The valve can only be properly tightened if the kayak is deflated.

Pin up Air in	Pin down Air out
	

## PUMP USE



Attach the hose to the pump and kayak.


Aquatone pump is equipped with two inflation modes:

- **Double action mode:** initial inflation of the kayak, air flows into the kayak during pumping when moving up and down - the air valve is closed
- **Single action mode:** the final inflation of the kayak

The pump is also equipped with a pressure gauge. The maximum pressure for the sides is 3 Psi / 0.2 Bar, for the deck 5 Psi / 0.33 Bar.


## DECK INFLATION

Inflate the kayak deck. Then put the deck in a kayak. Max. pressure is 5 Psi / 0.33 Bar for deck. Insert the deck into the kayak so that the Velcro strap for securing the seats is at the top.

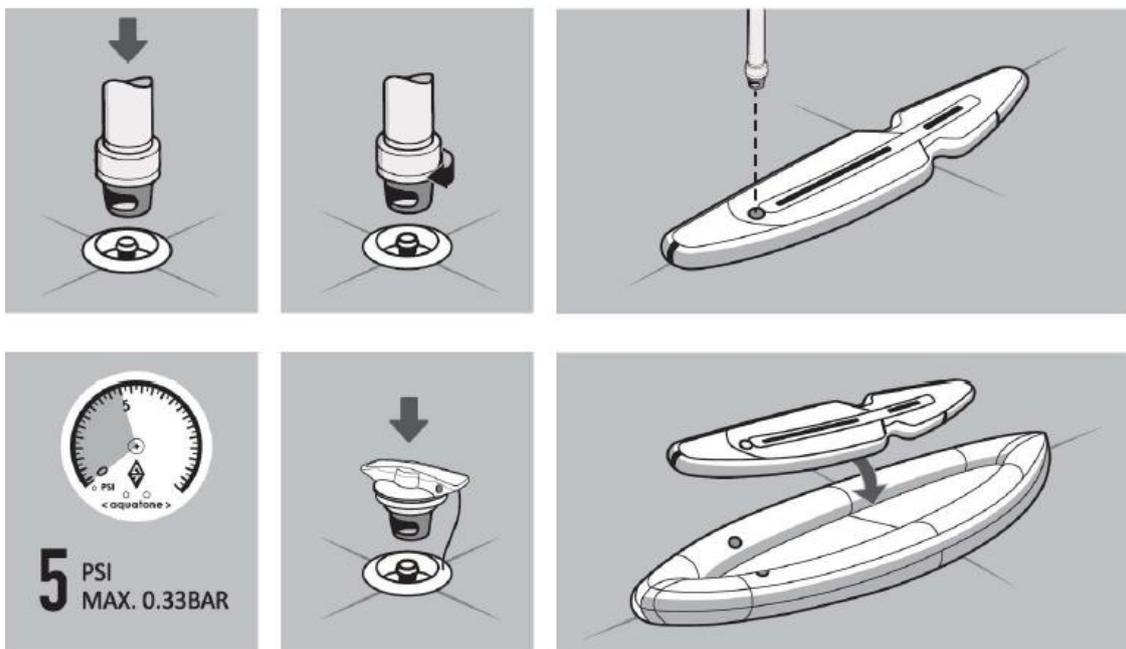


## INFLATION OF THE SIDES

After inserting the deck, inflate the sides to a maximum of 3 Psi / 0.2 Bar.

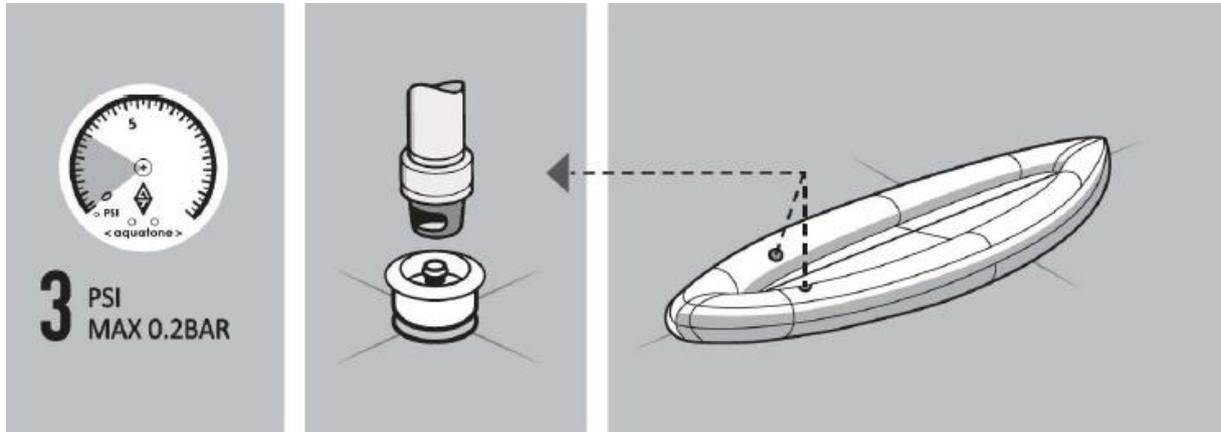




## SEAT ATTACHMENT

Attach the seats to the deck. Align the Velcro strap seats with the Velcro straps on the kayak deck. Then secure the seats with nylon straps to the sides of the kayak. Adjust the distance between the saddles according to your preference. The number of seats depends on the model.

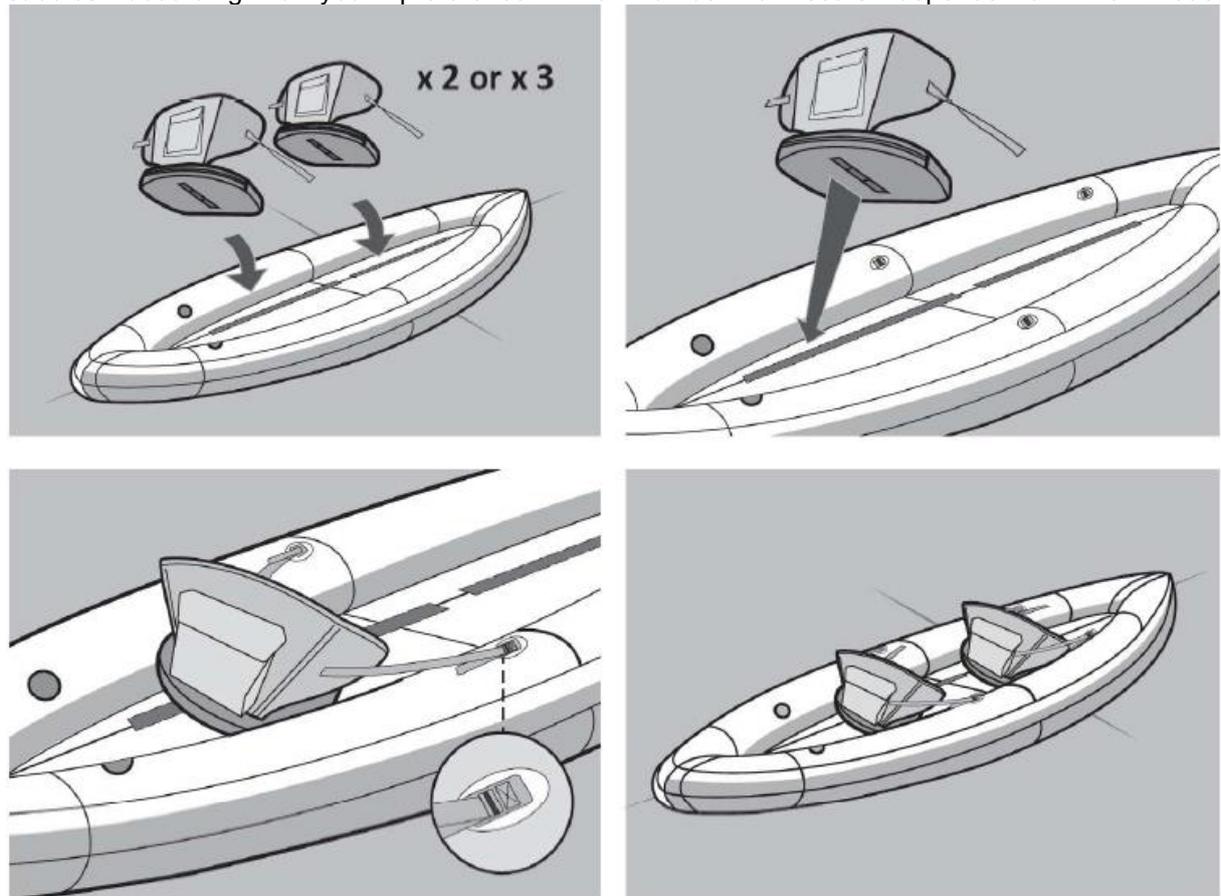

# FINS ATTACHEMENT



Turn the kayak to the side. Slide the lock plate from left to right. The tip of the fin must point towards the end of the kayak. Make sure that the fin is properly secured, you should hear a click when the lock plate is inserted.

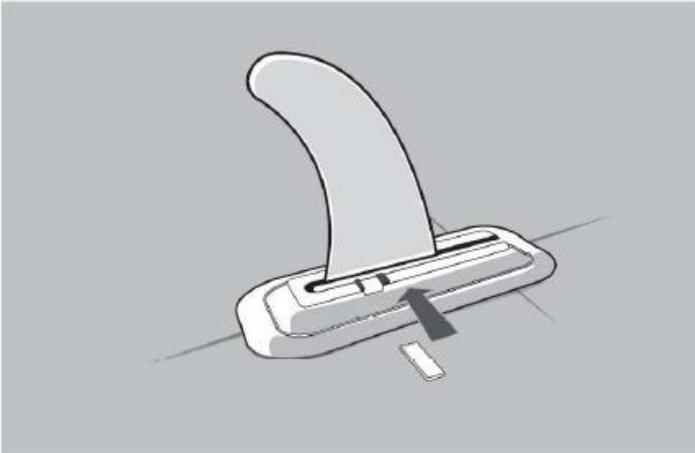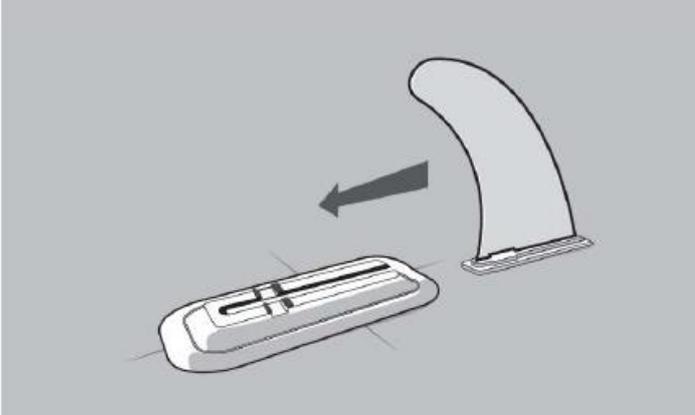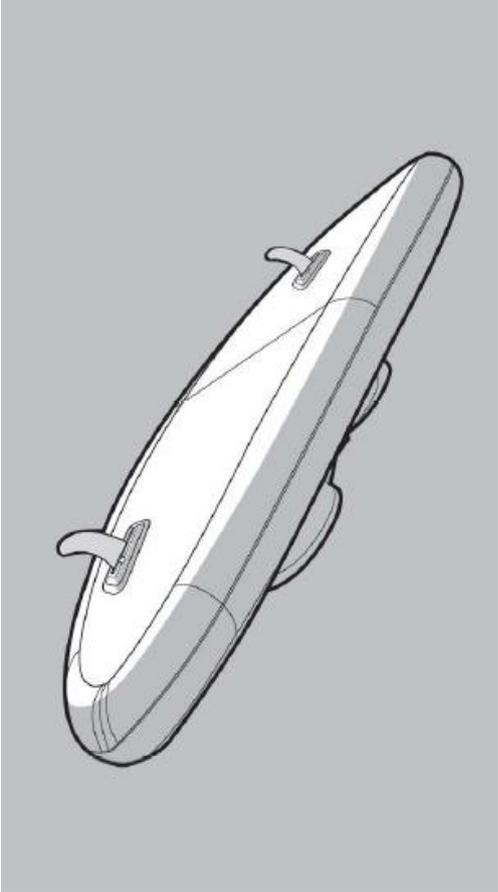

# PADDLE ASSEMBLY

Make sure you have all 4 parts of the paddle. The paddles are connected with the middle part.

First join the blade with the poles and then join the two paddles. All connections are connected using pins.

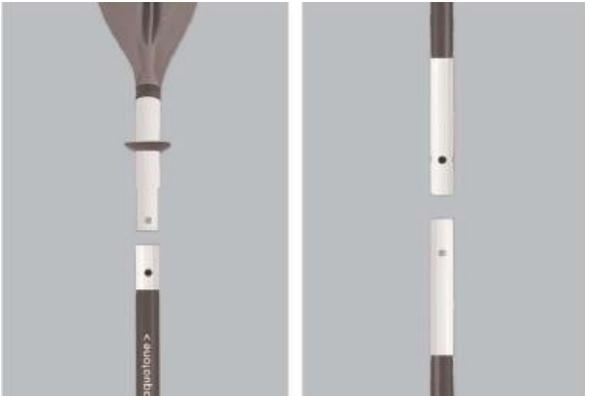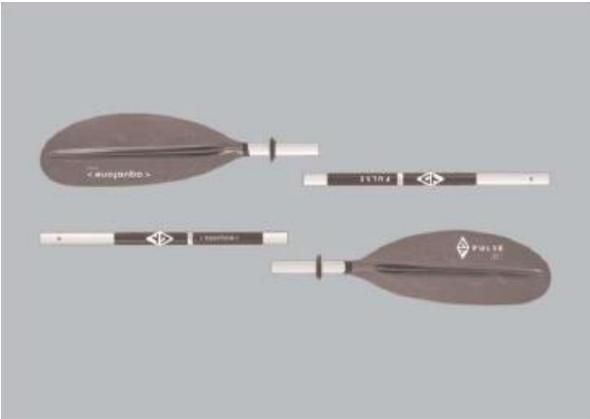

## KAYAK DEFLATION



Before deflation, clean the valve of dirt.







Slowly press the pin, the initial air burst out then the air flow slows down. Once the airflow has slowed down, you can push the pin all the way in and turn it counterclockwise to the OPEN position.




To deflate the kayak, connect the hose to the pump in the DEF and pump out the air.

## FOLD AND PACK

Remove all other accessories. Deflate all air through the assembly. Assemble the kayak according to the pictures below.

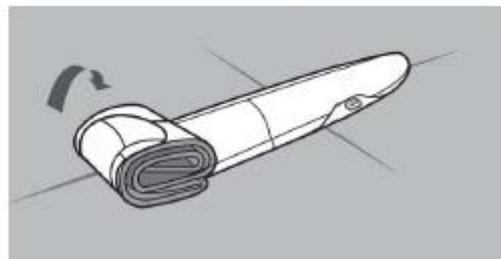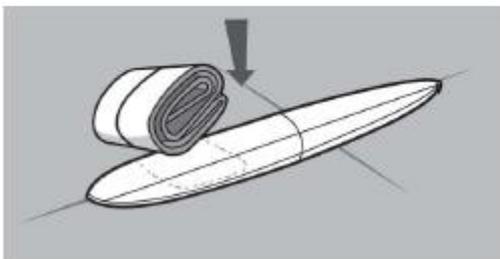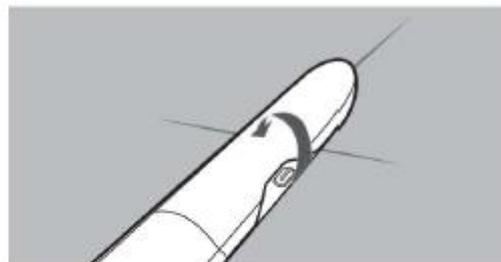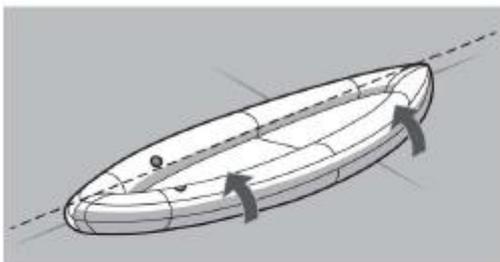

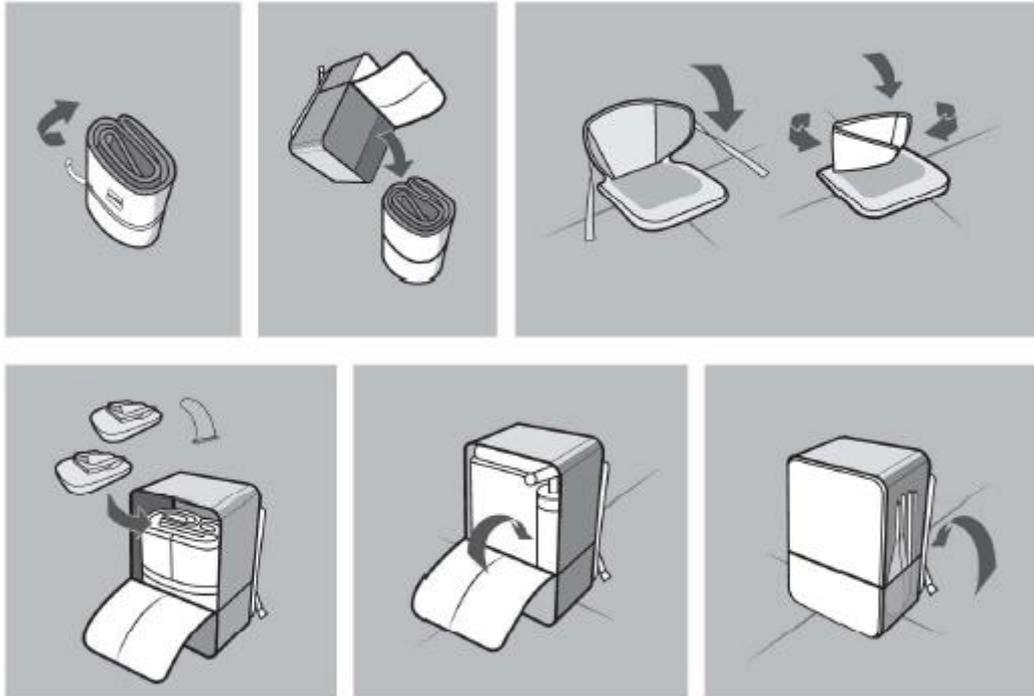

## CARE, MAINTENANCE AND STORAGE

- Open the drain valves in the middle and on the back of the kayak. Tilt the kayak so that there is no excess water in it.
- Clean the kayak, clean the bottom and seats with water or soap and water after each use so that it is not damaged by sand, sun, and salt water. Do not use aggressive cleaning agents.
- Dry the inside and outside of the kayak thoroughly with a sponge or cloth / towel.
- Check the condition of the kayak before and after each use.
- Do not pull the kayak on the ground, you may damage the surface of the kayak.
- Store the kayak in a cool, clean, and dry place.
- Do not store the kayak in extreme conditions (above 50 ° C and below 0 ° C)

## REPAIRS


### LEAK AROUND THE VALVE

Deflate the kayak completely.

Firmly grasp the inside of the valve through the bottom of the wall.

Insert the supplied wrench into the valve.

Use a wrench to tighten the valve clockwise.

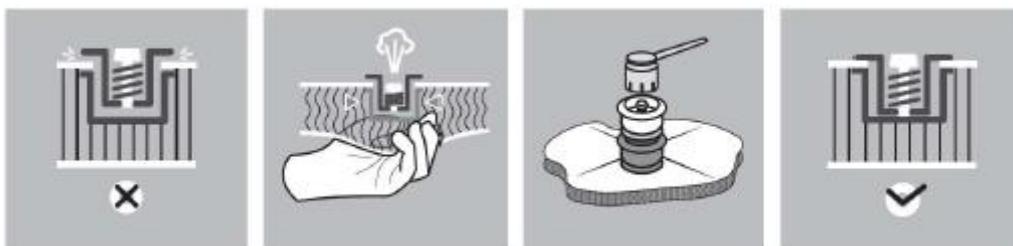

## VALVE LEAK THROUGH THE MIDDLE PART

Contact your supplier, possibly damaged valve.

## PUNCTURE ON THE KAYAK SURFACE OR AIR CHAMBERS

Locate the puncture. Deflate the kayak completely.

Clean and dry the punctured area.


Select the same patch material.

Cut out the required part of the patch.

Apply glue for soft PVC materials.

Paste and hold the patch for 30 seconds. Apply force to the patch.

Allow the patch to dry for 12 hours before using it again.

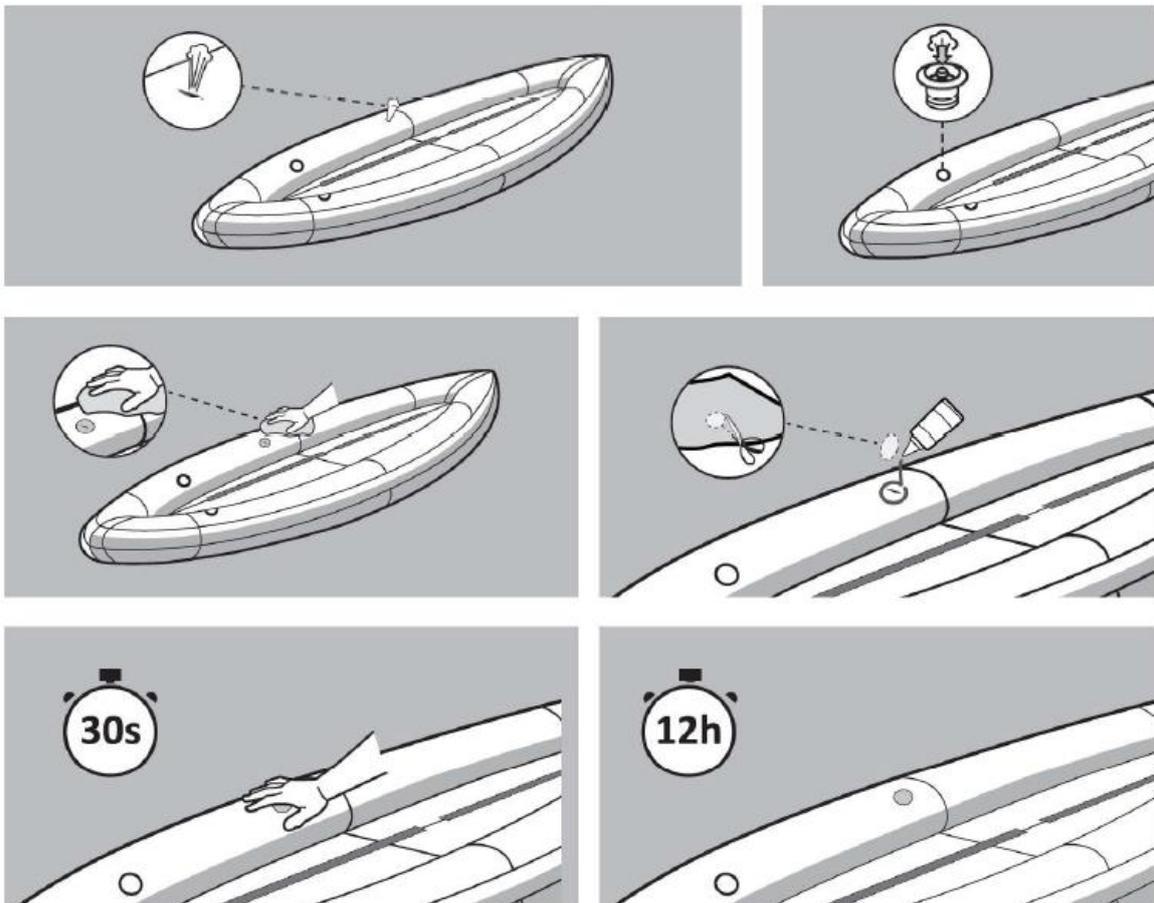

**NOTE:** For logistical reasons, the adhesive is not shipped with the repair kit. Kayak repairs must be performed in a clean place, out of reach of sun and rain. Avoid contact of the adhesive with eyes, mouth, or skin. Keep the repair kit out of the reach of children.

## ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

# TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

## General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

## Warranty Conditions

### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

## Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ**  
**SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR  
Headquarters: Dělnická 957, Vítkov, 749 01  
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264  
VAT ID: CZ26847264

Phone: +420 556 300 970  
E-mail: eshop@insportline.cz  
reklamace@insportline.cz  
servis@insportline.cz

Web: www.inSPORTline.cz

**SK**  
**inSPORTline s.r.o.**

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723  
VAT ID: SK2020177082

Phone: +421(0)326 526 701  
E-mail: objednavky@insportline.sk  
reklamacie@insportline.sk  
servis@insportline.sk

Web: www.inSPORTline.sk