




USER MANUAL – EN

IN 20142 Exercise bike inSPORTline inCondi UB45i

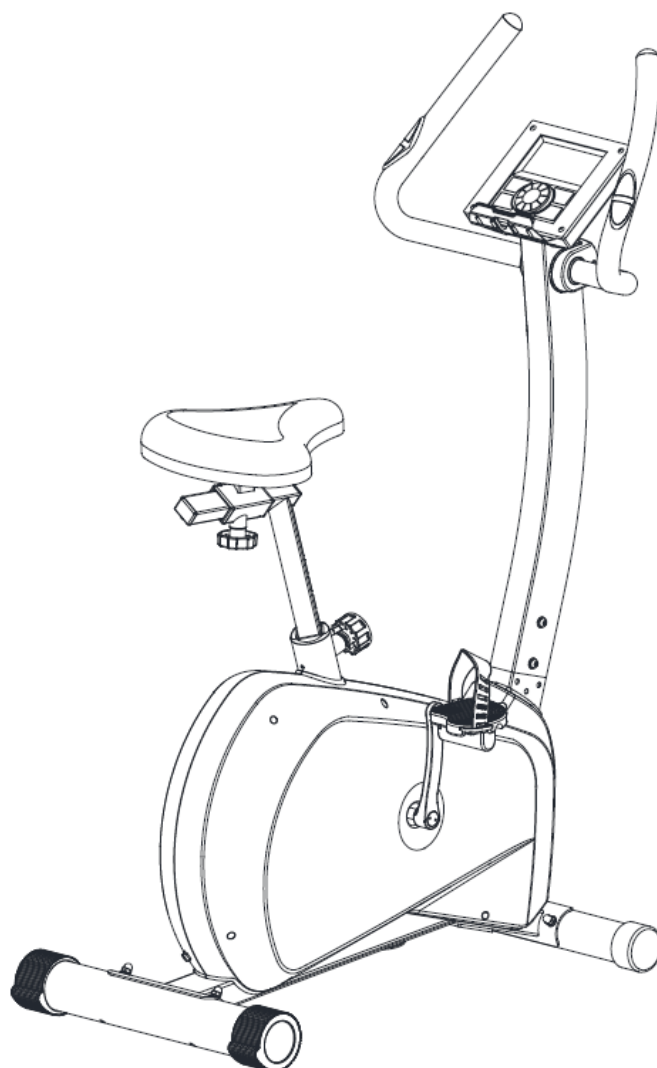

CONTENTS

SAFETY INSTRUCTIONS.....	3
IMPORTANT NOTES	3
PARTS LIST	4
ASSEMBLY	7
CONSOLE	11
BUTTONS	11
DISPLAY	12
BUTTON FUNCTIONS	12
PROGRAMS	13
APPLICATION	18
ICONSOLE APPLICATION	19
SIGN IN.....	20
HISTORY	21
REST HR TEST	23
SUPPORT	24
SETTING.....	24
QUICK START	26
INTERVAL.....	27
MAP MY ROUTE	29
CONSTANT POWER.....	31
PROGRAMS	34
AI TRAINING.....	36
GYM CENTER	37
USE	38
CORRECT BODY POSTURE	38
MAINTENANCE	38
STORAGE	39
IMPORTANT NOTICE	39
ENVIRONMENT PROTECTION	39
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS.....	39

SAFETY INSTRUCTIONS




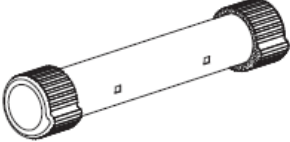
- To ensure the best safety of the exerciser, regularly check it on damages and worn parts.
- If you pass on this exerciser to another person or if you allow another person to use it, make sure that that person is familiar with the content and instructions in these instructions.
- Only one person should use the exerciser at a time.
- Before the first use and regularly make sure that all screws, bolts and other joints are properly tightened and firmly seated.
- Before you start your work-out, remove all sharp-edged objects around the exerciser.
- Only use the exercise for your work-out if it works flawlessly.
- Any broken, worn or defective part must immediately be replaced and/or the exerciser must no longer be used until it has been properly maintained and repaired.
- Parents and other supervisory persons should be aware of their responsibility, due to situations which may arise for which the exerciser has not been designed and which may occur due to children's natural play instinct and interest in experimenting.
- If you do allow children to use this exerciser, be sure to take into consideration and assess their mental and physical condition and development, and above all their temperament. Children should use the exerciser only under adult supervision and be instructed on the correct and proper use of the exerciser. The exerciser is not a toy.
- Make sure there is sufficient free space 0.6 m around the exerciser when you set it up.
- To avoid possible accidents, do not allow children to approach the exerciser without supervision, since they may use it in a way for which it is not intended due to their natural play instinct and interest in experimenting.
- Please note that an improper and excessive work-out may be harmful to your health.
- Please note that levers and other adjustment mechanisms are not projecting into the area of movement during the work-out.
- When setting up the exerciser, please make sure that the exerciser is standing in a stable way and that any possible unevenness of the floor is evened out.
- Always wear appropriate clothing and shoes which are suitable for your work-out on the exerciser. The clothes must be designed in a way so that they will not get caught in any part of the exerciser during the work-out due to their form (for example, length). Be sure to wear appropriate shoes which are suitable for the work-out, firmly support the feet and which are provided with a non-slip sole.
- Be sure to consult a physician before you start any exercise program. He may give you proper hints and advice with respect to the individual intensity of stress for you as well as to your work-out and sensible eating habits.
- Maximal weight: 130 kg
- Category: HC for home use









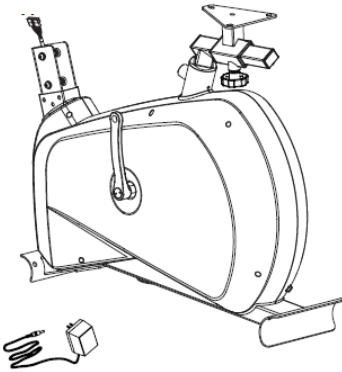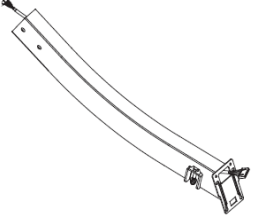


IMPORTANT NOTES


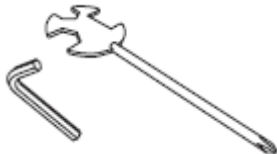
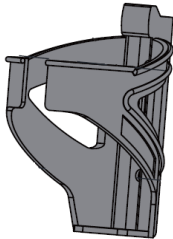

- Assemble the exerciser as per assembly instructions and be sure to only use the structural parts provided with the exerciser and designed for it. Prior to the assembly, make sure the contents of the delivery is complete by referring to the parts list of the assembly and operating instructions.
- Be sure to set up the exerciser in a dry and even place and always protect it from humidity. If you wish to protect the place particularly against pressure points, contamination, etc., it is recommended to put a suitable, non-slip mat under the exerciser.

- The general rule is that exercisers and training devices are no toys. Therefore, they must only be used by properly informed or instructed persons.
- Stop your work-out immediately in case of dizziness, nausea, chest pain or any other physical symptoms. In case of doubt, consult your physician immediately.
- Children, disabled and handicapped persons should use the exercise only under supervision and in presence of another person who may give support and useful instructions.
- Be sure that your body parts and those of other persons are never close to any moving parts of the exerciser during its use.
- When adjusting the adjustable parts, make sure they are adjusted properly and note the marked, maximum adjusting position, for example of the saddle support, respectively.
- Do not work out immediately after meals!
- **WARNING!** A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!

PARTS LIST

	A	Main frame
	B	Middle post
	C	Front stabilizer
	D	Rear stabilizer

	E	Handlebars
	E1/E2	Handlebars covers
	F1	Seat adjustment
	G	Seat
	H	Console
	J1	Screw M8 x 75L
	J2	Screw M8 x 90L
	J3	Nut M8
	J4	Spring washer M8
	J5	Washer M8
	J9	Screw M4

	K1/K2	Pedals left/right
		Tools
	M1	Bottle holder
	M2	Screw


ASSEMBLY

STEP 1

Attach the front stabilizer (C) to the main frame (A) with screws (J1), washer (J5) and nut (J3) in the direction of the sticker on the stabilizer.

Attach the rear stabilizer (D) to the main frame (A) with screws (J2), washer (J5), spring washer (J4) and nut (J3).


If necessary, stabilize with the leveling feet.

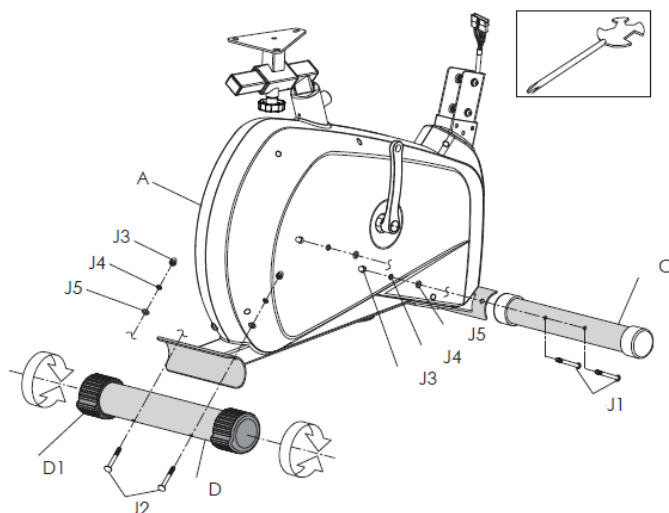

STEP 2

Connect the cables (A1) and (B1).

Attach the middle post (B) to the main frame (A) with pre-installed screws (J4), spring washer (J6) and washer (J5).

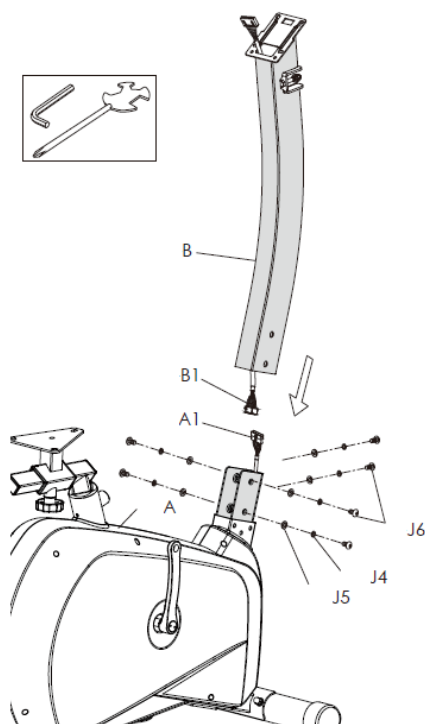


STEP 3

Pass the cables through the bracket handle. Attach the handlebar to the middle post using pre-installed nuts (J7) and wave washer (J8).

Attach the handle caps (E1 and E2). Now go to the STEP 4.

Be careful not to pinch the cables.

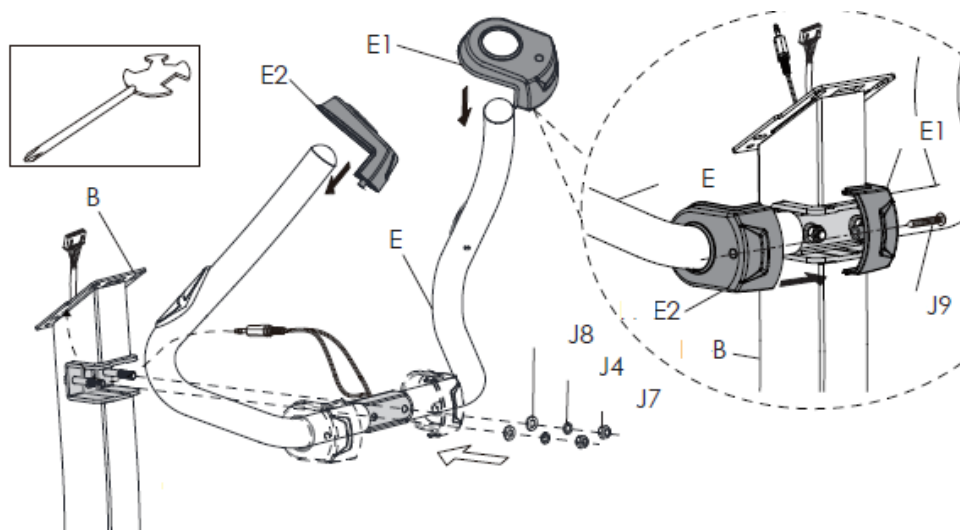


STEP 4

Remove the 4 bolts (H1) from the console (H).

Connect the cables.

Slide the console into the bracket. Attach the console (H) with the screws (H1) to the middle post (B).


Now you can finish attaching the handles in STEP 3 with the M4 screw (J9).

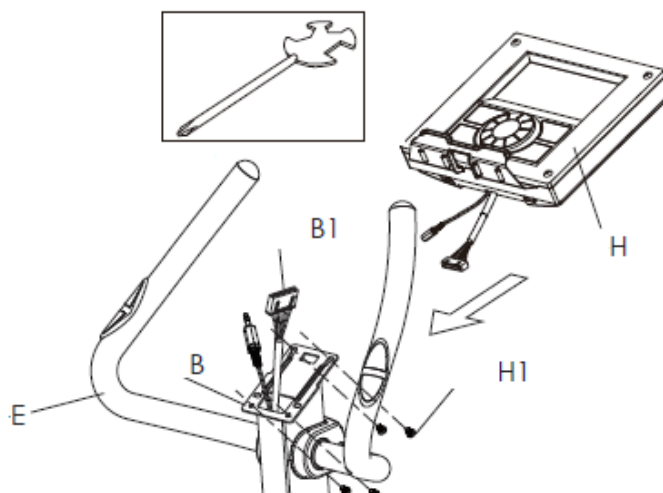

STEP 5

Attach the seat post (F) to the main frame (A) with screws (F1). Make sure the screw is in the positioning hole.


Secure the seat (G) to the seat post (F3) using the pre-installed nuts (G1) and washer (G2) on the bottom of the seat.

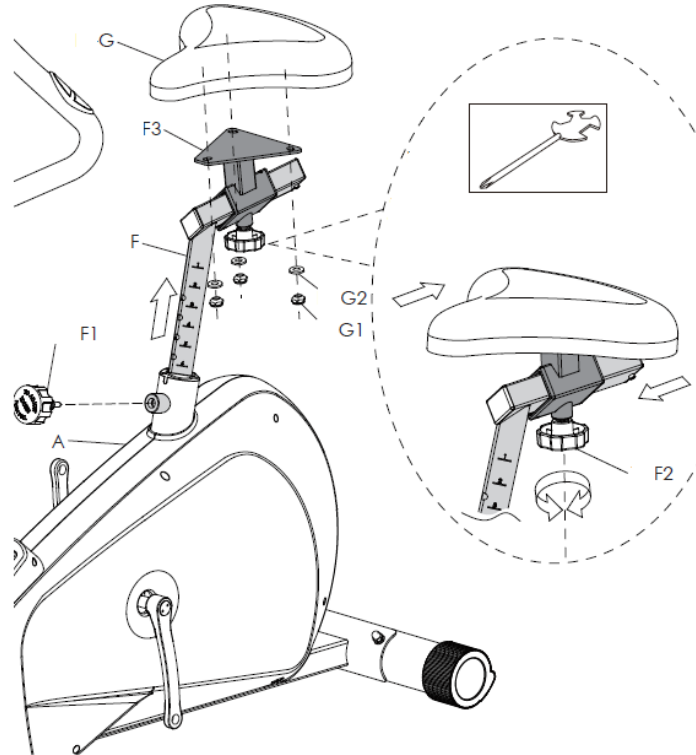

PEDAL MOUNTING


Attach the left pedal (K1) to the left crank by screwing it counterclockwise.

Attach the right pedal (K2) to the right crank by screwing it clockwise

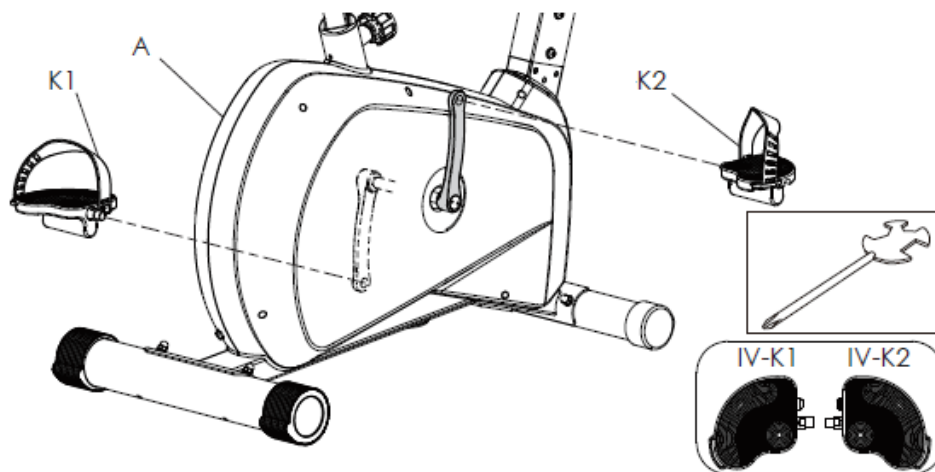


BOTTLE HOLDER

Remove pre-installed screws (M2). Attach the bottle holder (M1) to the support tube (B) with screws (M2).

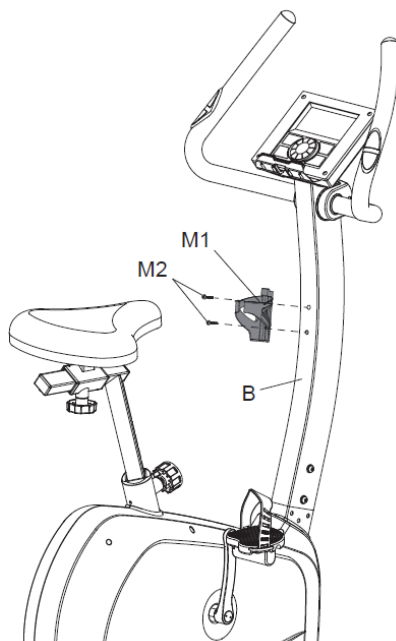


TRANSPORT

For moving grab the handles (E) and tilt slightly, push the exercise bike to the desired location.

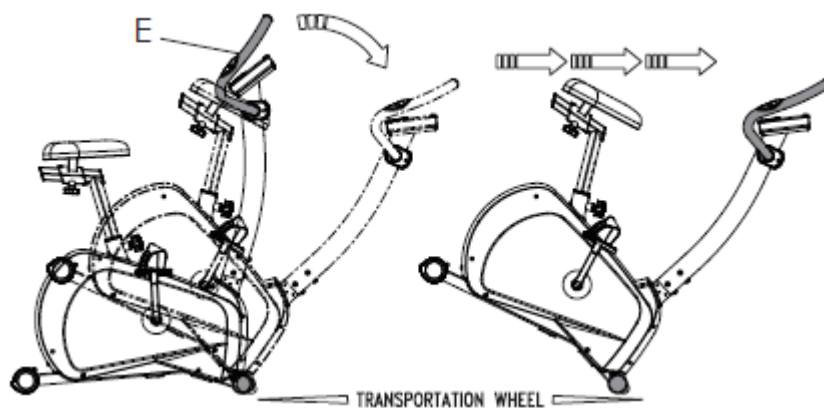

CONNECTION

Place the device as close as possible to the outlet and connect.

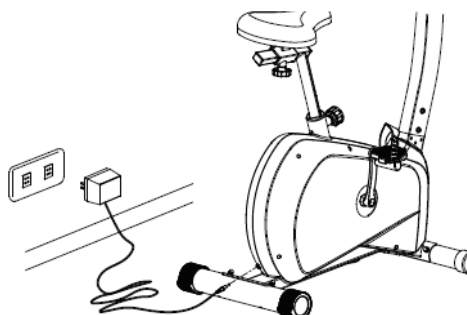


CONSOLE



BUTTONS

	ENTER	Press ENTER to confirm
	UP / DOWN	Use the UP / DOWN buttons to navigate through menus and adjust values
	START / STOP	Press the START / STOP button to start or stop training
	RESET	Press the RESET button to return to the menu when the program is stopped and delete the preset options.
	TOTAL RESET	Resets all data
	RECOVERY	Cardiac test

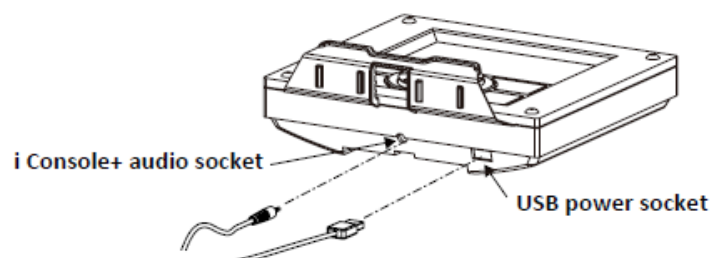

iConsole tunelinc cable is not a common audio jack, use only the included compatible cable.

The power output of the USB slot is not limited.

Supported devices:

iPod touch (5 generation)	iPhone 4S	iPad
iPod touch (4 generation)	iPhone 4	iPad Mini 3
iPod touch (3 generation)	iPhone 3GS	iPad Mini 2
iPhone 6 plus	iPad Air 2	iPad mini
iPhone 6	iPad Air	
iPhone 5S	iPad 4	
iPhone 5C	iPad 3	
iPhone 5	iPad 2	

iOS version 5.1.1 or higher

Android tablet with OS 4.02 or higher

1280 x 752 Android tablet (under 10 inches)

Android smart phone OS 2.2 or higher

Android smart phone with resolution: 800 x 480, 1280 x 720, 1280 x 800 (below 7 inches)

DISPLAY

SPEED	displays speed during training displays values from 0.0 to 99.9
RPM	displays revolutions per minute displays values from 0 to 999
TIME	displays training time displays values 0:00 - 99:59, adjustable value 0:00 - 99:00
DISTANCE	displays distance displays values 0:00 - 99.9, adjustable value 1.0–99.0
CALORIES	displays calories burned displays values 0-999, adjustable value 0-990
WATT	displays power consumption displays 0-350
PULSE	displays heart beats per minute during training triggers a warning when a target value is set shows values 0-230, adjustable value 0-30-230
MANUAL	Manual program
PROGRAM	There are 12 preset programs to choose from
H.R.C	HRC program
WATTS	WATT program
USER	The user can choose the resistance

BUTTON FUNCTIONS

START / STOP	Starts or stops training
--------------	--------------------------

RESET	Returns to the menu during preset training or stop Holding down for 2 seconds restarts the console and enter the user settings
OTOČENÍ KOLEČKEM NAHORU	Increases the load Navigation in settings
OTOČENÍ KOLEČKEM DOLŮ	Reduces load Navigation in settings
MODE	Confirms the selection or setting
TOTAL RESET	Returns to the main menu and starts the user settings
RECOVERY	Cardiac test

PROGRAMS

When turned on, all data will be displayed for 2 seconds (Pic. 1)

It then displays the preset wheel diameter in the speed window and km or mile in the distance window for 1 second (Pic 2).



Pic. 1



Pic. 2

Then the main menu is displayed. (Pic. 3)

If the console does not detect pedaling or any operation on the console, it enters standby mode after 4 minutes. Press any button to wake the console.

HOW TO CHOOSE PROGRAM

Navigate the main menu using the resistance adjustment knobs. Move up / down to select the program: M (Manual) (Pic. 3) - P (Program 1–12) (Pic. 4) - ♥ (HRC Program) (Pic. 5) - W (WATT Program) (Pic. 6) - U (user program) (Pic. 7).

Press MODE to confirm the selection.



Pic. 3



Pic. 4



Pic. 5



Pic. 6



Pic.7

MANUAL PROGRAM

Press START to start the manual program from the main menu or select M with the navigation knob and press MODE.

Select the load level 1-16 using the navigation knob (Pic. 8), the default value is 1.

Press MODE to confirm the selection.

Select time (Pic. 9), distance (Pic.10), calories (Pic.11), pulse (Pic.12), confirm with MODE.

Press START / STOP to start the program. (Pic. 13).

During training, the user can adjust the load. The load is displayed in the WATT window. If you do not change the load for 3 seconds, the display shows: time / RPM / speed / distance / calories / watt / pulse.

Press START / STOP to stop the program.

Press RESET to return to the main menu.



Pic. 8



Pic. 9



Pic. 10



Pic. 11



Pic. 12



Pic. 13

SELECTING A PRESET PROGRAM

Select Program using the navigation knob, select P01 - P12 (Pic. 14) and press MODE to confirm.

Select load 1-16 (Pic. 15, Preset Load 1). Press MODE to confirm.

Set the time (Pic. 16)

Press START / STOP to start the program.

During training, the user can adjust the load

Press START / STOP to stop the program.

Press RESET to return to the main menu.



Pic. 14



Pic. 15



Pic. 16

HRC PROGRAM

Use the navigation knob to select HRC (Pic. 17) and press MODE to confirm.

Set age (Pic. 18). Confirm with MODE.

Select 55% (Pic. 19), 75% (Pic. 20), 90% (Pic. 21) or TAG (user setting, Original Value: 100) (Pic. 22).
Select TAG from 30–230.

Set the time (Pic. 23)

Press START / STOP to start the program.

Press START / STOP to stop the program.

Press RESET to return to the main menu.



Pic. 17



Pic. 18



Pic. 19



Pic. 20



Pic. 21



Pic. 22



Pic. 23

WATT PROGRAM

Select with the navigation knob W (Pic. 24) and press MODE to confirm.

Set the required power 10-350, original value: 120 (Pic. 25)

Set the time (Pic. 26)

Press START / STOP to start the program. The load is adjusted automatically. It is possible to adjust the desired performance during training.

Press START / STOP to start the program.

Press START / STOP to stop the program.

Press RESET to return to the main menu.



Pic. 24



Pic. 25



Pic. 26

USER PROGRAM

Select with the navigation knob U (Pic. 27) and press MODE to confirm.

Set the profile (Pic. 28), 8 columns of load can be set, hold MODE for 2 seconds to exit the setting.

Set the time (Pic. 29)

Press START / STOP to start the program. The load can be adjusted using the navigation knob.

Press START / STOP to start the program.

Press START / STOP to stop the program.

Press RESET to return to the main menu.



Pic. 27



Pic. 28



Pic. 29

RECOVERY

After training, grab the handles or attach the chest strap and press RECOVERY. All display functions will stop and only the 00:60 countdown time will be displayed. (Pic. 30). After the countdown, the result is displayed (Pic. 31)

Press RECOVERY again to return to the main menu.



Pic. 30



Pic. 31

1	outstanding
$1.0 < F < 2.0$	excellent
$2.0 < F < 2.9$	good
$3.0 < F < 3.9$	fair
$4.0 < F < 5.9$	below average
6.0	poor

APPLICATION

1. Check the back of the console
2. You can see the Bluetooth name of the console
3. Open the Bluetooth on your smart device
4. Enter the iConsole Training App
5. Follow the instructions below to learn how to use the app

Preset Programs P1-P12:

P1	P4	P7	P10
P2	P5	P8	P11
P3	P6	P9	P12

iCONSOLE APPLICATION



For iOS






For Android



In iConsole +, select MY TRAINING. Here you can see a summary of your training (total distance, total time, calories burned)

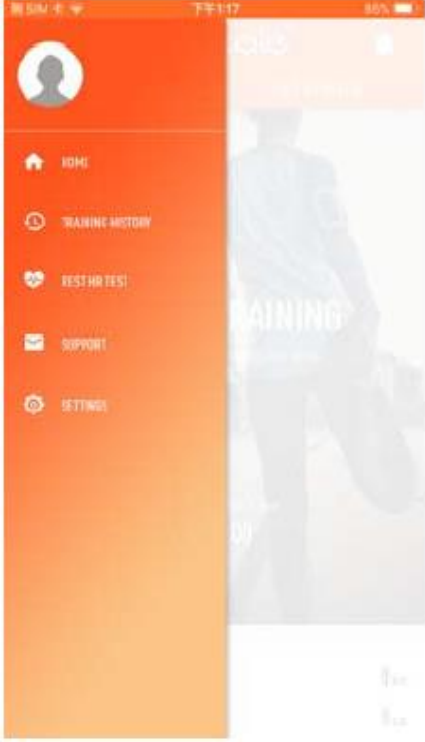SIGN IN

	
<p>1. Choose your avatar on left side to enter profile settings</p>	<p>2. Log in with your Facebook, Gmail or WeChat account</p>
	
<p>3. If you forgot your password you can choose Reset my password. Your new password will be send to your email.</p>	




MEMBERSHIP

- Choose your profile picture to enter profile settings.
- You can change profile picture or update your profile information. (If don't enter all required information, calculated data may not be calculated correctly.)

SIGN OUT




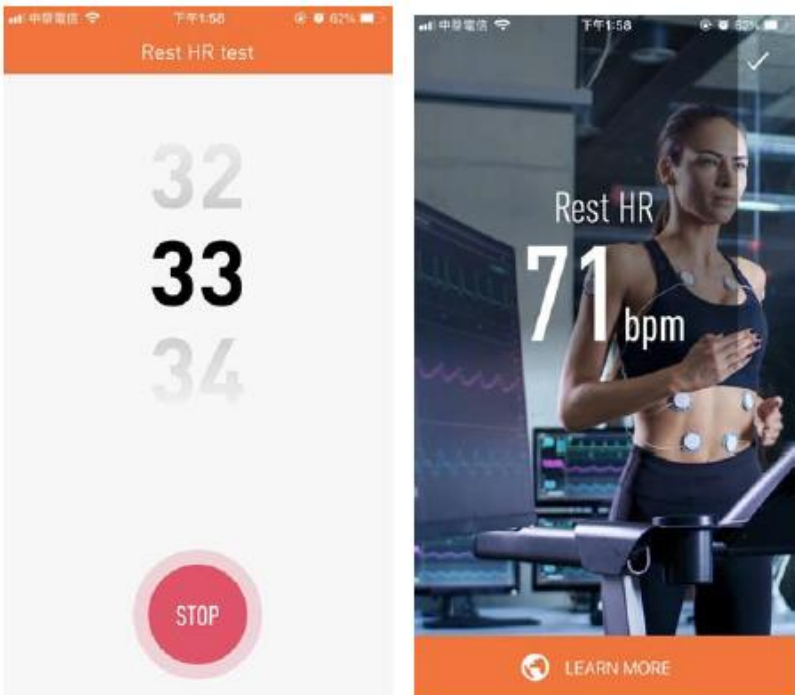
- Choose your profile picture to enter profile settings.
- Select the icon in the top right corner to sign out. (You can still **exercise** without signing in, but the data won't be saved.)

HISTORY

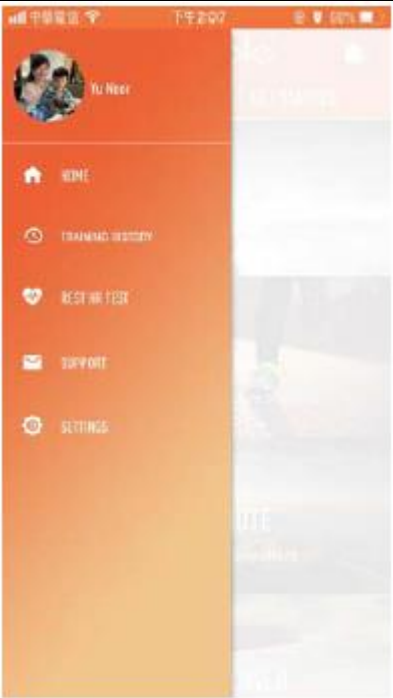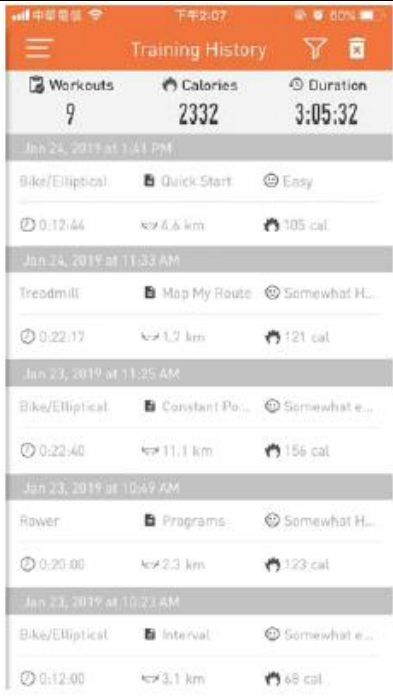
	
<p>Select profile picture and then select TRAINING HISTORY.</p>	<p>The measured data will be displayed: number of workouts, calories, training time and list of workouts.</p> <p>Choose  to delete data.</p> <p>Used device, program, RPM, time, distance and calorie data are recorded.</p> <p>Select a workout to display the information.</p> <p>Data from all devices and programs are stored.</p>

REST HR TEST


WARNING! A system for monitoring heart rate may not be accurate. Overloading during training may cause serious injury or death. If you feel any discomfort, immediately stop the exercise!

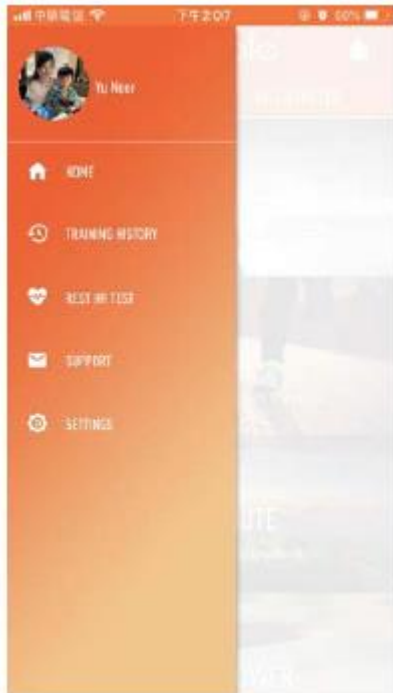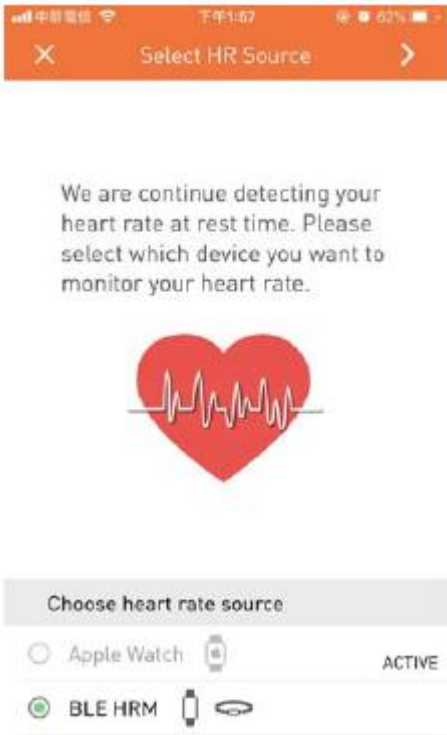	
<p>Select your profile picture to expand the menu. Select REST HR TEST.</p>	<p>Select source: Apple watch or BLE HRM</p>
	
<p>After connecting, select START and 60s countdown will begin. After the countdown, the rest heart rate is displayed at and the heart rate is calculated for the most accurate training program.</p>	

SUPPORT

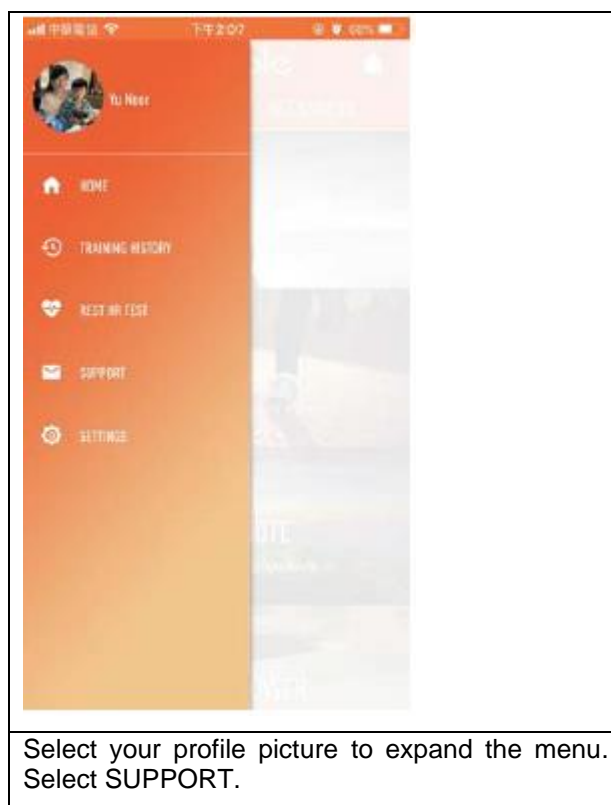


SETTING

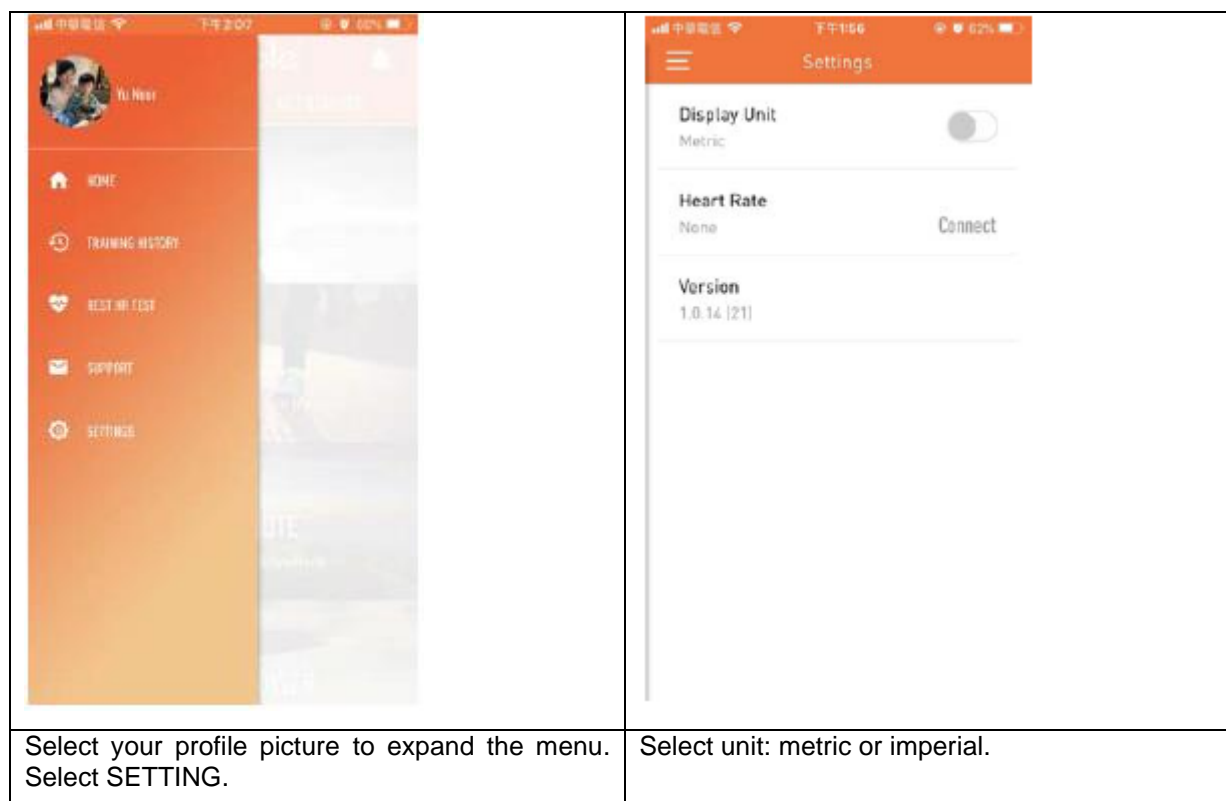






Select source: Apple watch or BLE HRM

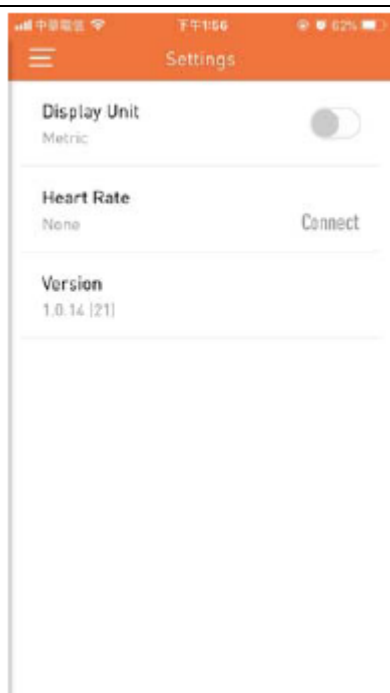


Check the program version

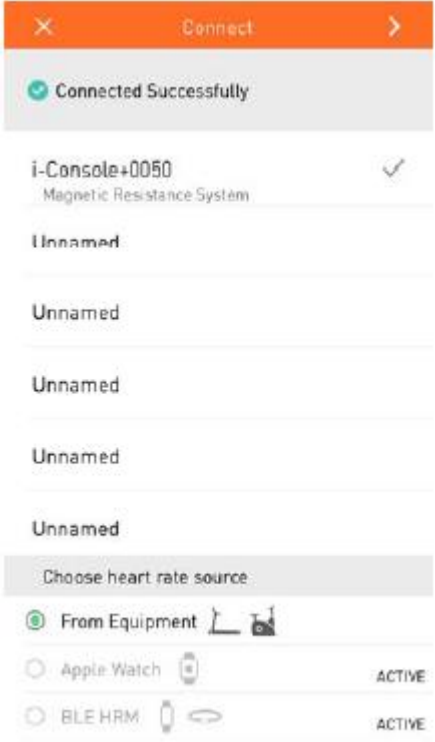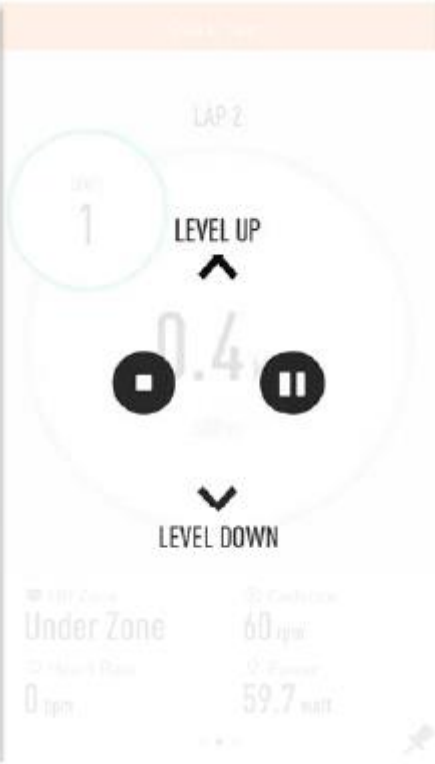

QUICK START


	<ol style="list-style-type: none"> 1. Bluetooth connection: Select the device you are using. If you are using a heart rate monitor, you can select it below. 2. Once the devices are paired, click > icon in the top right corner. 3. If you cannot find the device, make sure that Bluetooth is turned on. Next connection is automatic.
	<ol style="list-style-type: none"> 4. After turning on the program, you can adjust the load or pause / stop the program.

	<ol style="list-style-type: none"> 5. Select the pin icon to pin the data. 6. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.
---	--


INTERVAL



	<ol style="list-style-type: none"> 1. You can select the number of repetitions (interval cycles) (number in green circle), time (exercise time and rest time), level, target RMP, select go to start the program
---	---

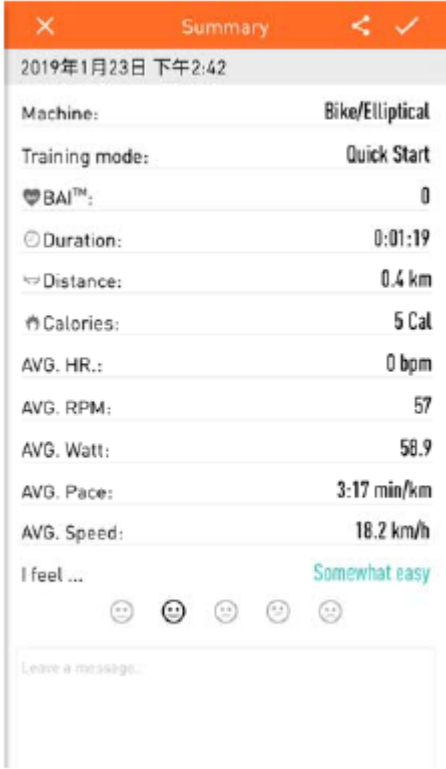	<p>2. After turning on the program, you can set the load or pause / stop the program.</p>
	<p>3. Select the pin icon to pin the data.</p>



	<ol style="list-style-type: none"> When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.
---	--



MAP MY ROUTE


	<ol style="list-style-type: none"> Select a location. Select a start point. Select the route and swipe the yellow GO button to the left. You can reset the route with the green button.
---	--

	<p>4. If you do not want to set the route yourself, you can select one of the preset routes. You can choose between China routes or worldwide routes.</p>
	<p>5. After turning on the program, you can set the load or pause / stop the program.</p> <p>6. Select the arrows to show or hide the menu. Select the diamond icon to change the map view.</p> <p>7. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.</p>



CONSTANT POWER

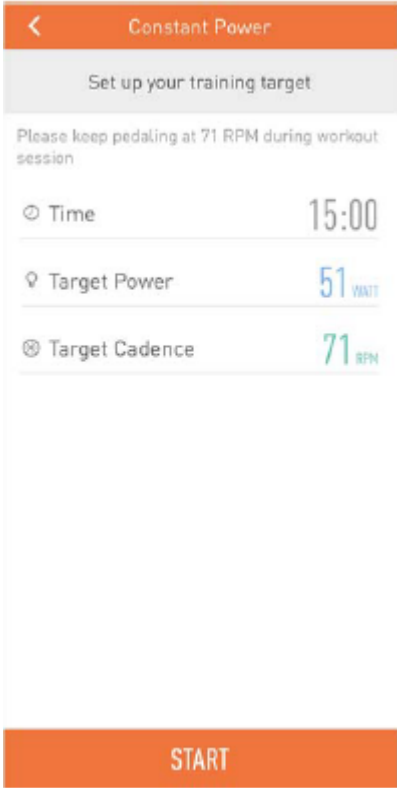	<p>1. After pairing with Bluetooth, set time, target power, target RPM, target cadence</p>
	<p>2. Training graphs are displayed, select one of the two graphs (Cadence / Power). The following information is displayed or by pinned with the pin button</p>

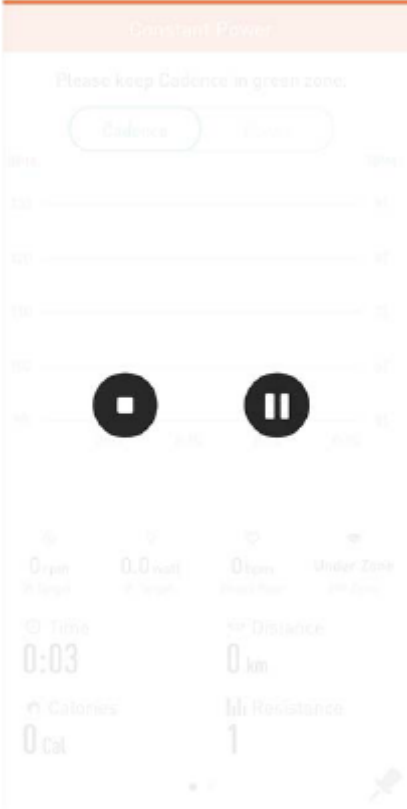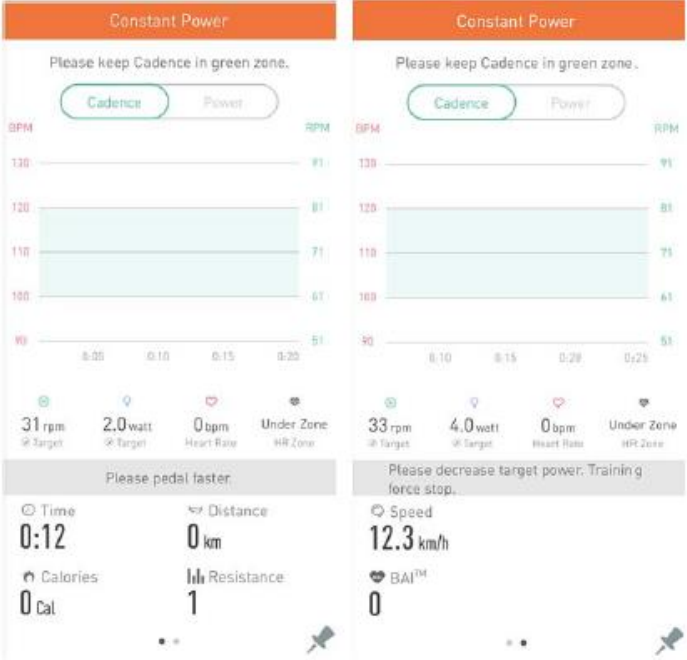	<p>3. Touch the display to pause or stop the training.</p>
	<p>4. Workout at constant speed.</p>

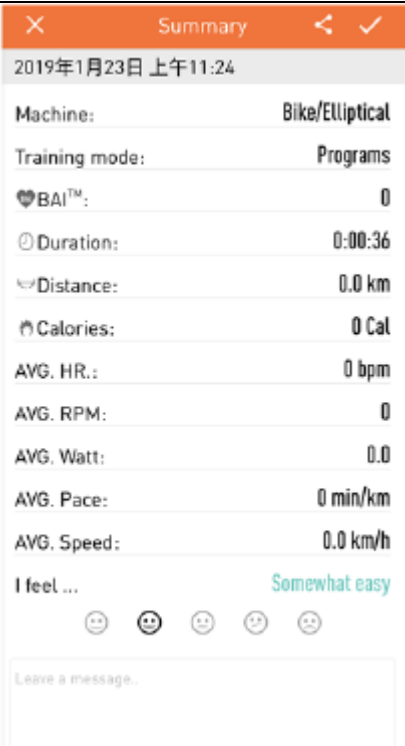

 <p>Summary</p> <p>2019年1月23日 上午11:24</p> <p>Machine: Bike/Elliptical</p> <p>Training mode: Programs</p> <p>BAI™: 0</p> <p>Duration: 0:00:36</p> <p>Distance: 0.0 km</p> <p>Calories: 0 Cal</p> <p>AVG. HR.: 0 bpm</p> <p>AVG. RPM: 0</p> <p>AVG. Watt: 0.0</p> <p>AVG. Pace: 0 min/km</p> <p>AVG. Speed: 0.0 km/h</p> <p>I feel ... Somewhat easy</p> <p>Leave a message..</p>	<p>5. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.</p>
--	--



PROGRAMS

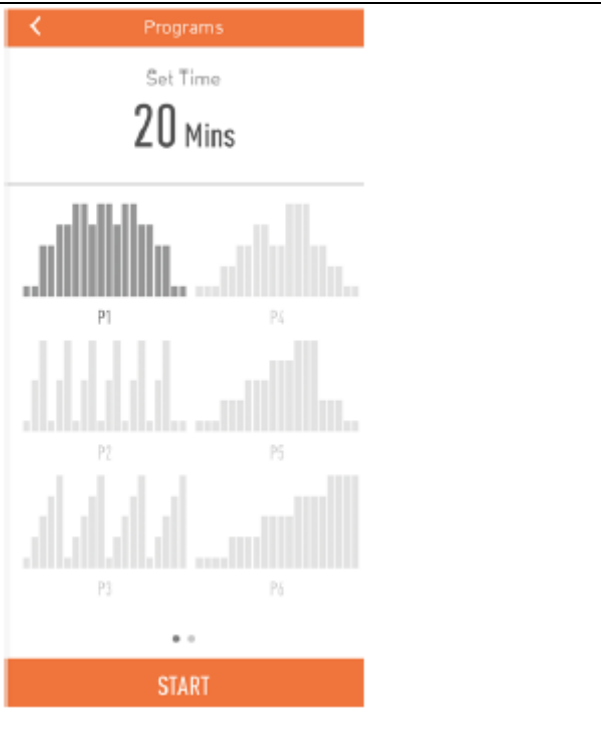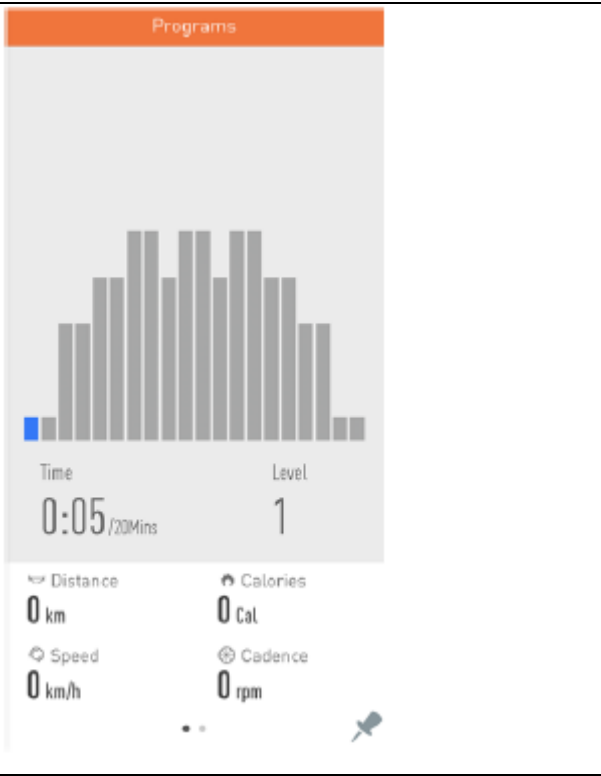	<p>1. After pairing with Bluetooth, select the program. 12 preset programs are displayed.</p>
	<p>2. The display shows the progress of the training.</p> <p>3. Select the pin icon to pin the data.</p>

	<p>4. Touch the screen to stop or pause the program or select the load.</p>
	<p>5. When you finish the exercise a summary of the exercise is displayed. You can compare the results with previous workouts.</p>

AI TRAINING

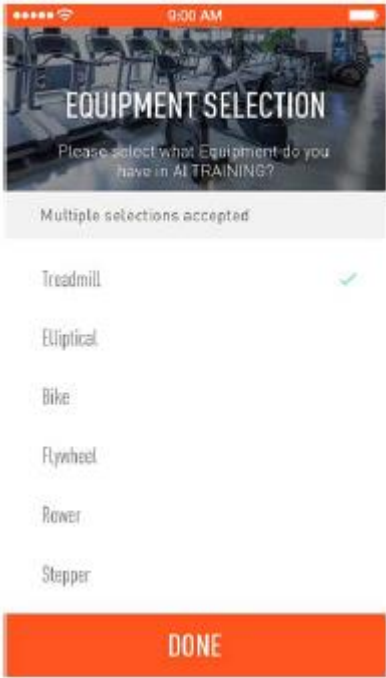 <p>The screenshot shows the 'EQUIPMENT SELECTION' screen of the AI TRAINING app. At the top, it says 'Please select what Equipment do you have in AI TRAINING?'. Below this, there's a list of equipment types: Treadmill, Elliptical, Bike, Flywheel, Rower, and Stepper. The 'Treadmill' option is selected, indicated by a green checkmark. At the bottom, there is an orange 'DONE' button.</p>	<p>1. After pairing with Bluetooth, select the machine (you can select multiple machines).</p>
 <p>The screenshot shows the 'Target' selection screen of the AI TRAINING app. At the top, it says 'Target'. Below this, there are four selectable options represented by images: 'MARATHON' (a runner), '10K RUNNER' (a runner with a checkmark), 'GET FIT' (a person measuring their waist), and 'BAL YOUR LIFE LIVE LONGER' (a person doing a yoga pose). At the bottom, there is an orange 'DONE' button.</p>	<p>2. Select your goal / program</p>

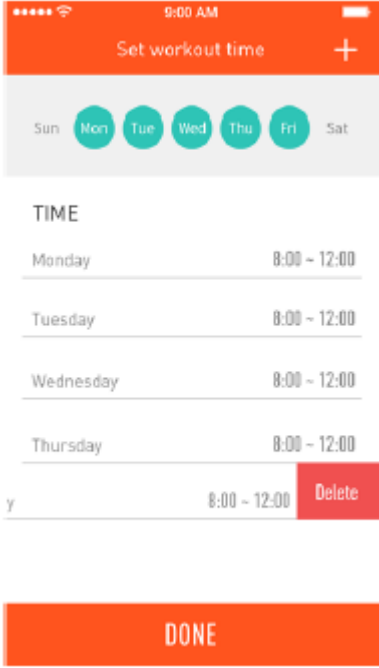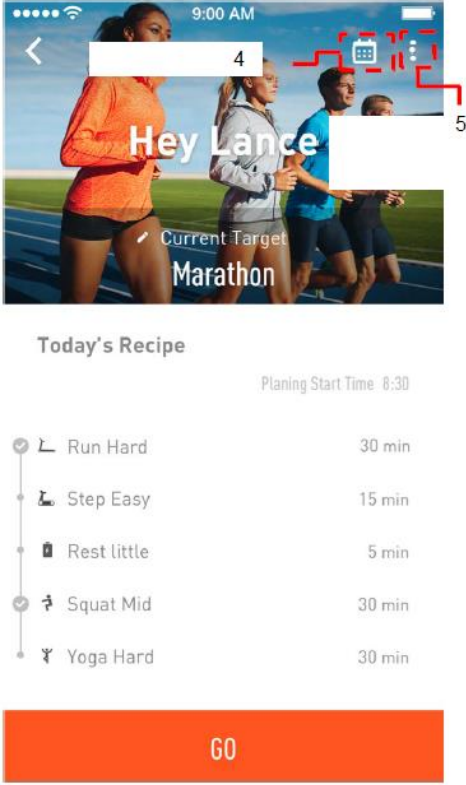	<p>3. Set your schedule.</p>
	<p>4. Training Overview</p> <p>5. Training time, machine and goal / program change</p>

GYM CENTER

In GYM CENTER, the user can download various training programs.

1. Download the selected program
2. Turn on iRoute + program
3. For iRoute + (Google Maps) training, the user must have wifi on and be logged in.

USE

Exercise on the exercise bike is based on very simple movements, but you will surely fall in love with them. Thanks to simplicity of the exercise on the exercise bike it can be done by elderly people. Prior to exercise, it is necessary to adjust the height of the saddle. It is important that you sit comfortably. The bicycle saddle must be set so that you can hold the ergonomically shaped handles when sitting. You should not have fully extended hands. You can damage your muscles.

To ensure a comfortable and comfortable exercise, put your feet on the pedal. Nowadays, all modern pedals are equipped with straps for fastening and stabilizing of the foot. It is important for your foot to be firmly and safely positioned during exercise.

The basis of exercising on a bicycle is that the legs are moving on a specific elliptical path. This movement is very similar to cycling. When doing exercise on a bicycle, you just sit on the saddle with the right height, keep your feet firmly in the pedals, hold the ergonomically shaped handles and exercise.

It is advisable at the beginning to choose a lower load. If you exercise at regular intervals on an exercise bike, you can gradually increase the load. You can increase the load gradually over a week or two weeks. Selecting a high load during the start of training can lead to rapid fatigue and muscle damage.

When exercising, it's important to choose the right load and the right tempo. Try to keep it throughout the exercise. It is not recommended to choose a high pace right from the start. Increase tempo after about a week of regular exercise. The high pace is not equal to the faster burning of calories. Correct calorie burning is reflected in an appropriate and regular exercise. At the beginning of the exercise, the number of burned calories may seem low, but regular and appropriate exercise is the key to achieving the best results.

Exercise on the exercise bike also leads to the formation of muscles. It is mainly used to strengthen the thigh and calf muscles. While exercising on a bicycle, you also move your buttocks.

If you want to exercise right, you should not forget to breathe properly. Proper and regular breathing is recommended in any exercise. It is important to keep regular deep inhales and exhales. Regular and proper breathing during exercises on the exercise bike involves intense exercise of the abdominal muscles. It is advisable to practice 30-35 after consuming food. Failure to do so may result in less calories burned, and in older age even lead to digestive problems.

For best results, you should also consider your diet. It is recommended to start a day of eating sweet food and pastries or muesli with milk. For lunch is recommended to eat a caloric richer meal. Do not forget about the soup. In the evening, light meals are recommended. If you want to improve your health, it's not just a regular exercise but a whole diet.

Bicycle exercise is an effective exercise for all busy people. Exercise on the exercise bike is effective in strengthening muscles, especially thighs, calves and buttocks. Regular exercise can lead to a slimmer figure. Exercise is recommended not only as a winter training for cyclists but also for people who want to burn excess calories. Regular breathing, regular exercise, reasonable tempo, and balanced diet can lead to your desired results.

CORRECT BODY POSTURE

When training, keep your body upright, or you can learn your hand on your forearms. During pedaling, you should not have your legs fully extended. Your knees should be slightly bent when fully pressing down the pedal. Keep your head straight with your spine to minimize the pain of the cervical muscles and upper back muscles. Always exercise fluently and rhythmically.

MAINTENANCE

- When assembling, tighten all screws and adjust the bike to the horizontal position.
- Check the screws after 10 hours of use.

- Wipe the sweat after the exercise. Clean the device with a cloth and gentle cleanser. Do not use solvents or aggressive cleaners on the plastic parts.
- When noise is increased, it is necessary to check that all joints are tightened properly.
- Place the product in a clean, ventilated and dry room.
- Do not expose the device to direct sunlight.

STORAGE

Keep the exercise bike in a clean and dry environment. Make sure the power switch is turned off and the exercise bike is not plugged into the power socket.

IMPORTANT NOTICE

- This exercise bike comes with standard safety regulations and is only suitable for home use. Any other use is prohibited and may be dangerous to users. We are not responsible for any injury caused by improper and forbidden use of the machine.
- Consult your doctor before starting training on the exercise bike. Your doctor should evaluate whether you are physically fit to use the machine and how much effort you are able to undergo. Incorrect exercise or switching of the body can harm your health.
- Carefully read the following tips and exercises. If you experience pain, nausea, breathing, or other health problems during exercise, immediately stop the exercise. If the pain persists, contact your doctor immediately.
- This exercise bike is not suitable as a professional or medical purpose. It can also not be used for healing purposes.
- The heart rate monitor is not a medical device. It provides only approximate information about your average heart rate, and any suggested pulse rate is not medically binding. Accumulated data may not always be accurate regarding uncontrollable human and environmental factors.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Borivojova Street 35/878, Prague 13000, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the

Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ

SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR
Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK

inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk